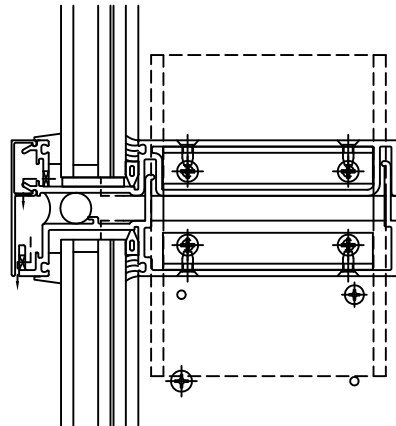



GENERAL IMPACT INSTALLATION INSTRUCTIONS; FOR JOB SPECIFIC APPLICATION, PLEASE CONTACT FACTORY TO VERIFY THAT SYSTEM MEETS APPLICABLE CODES.		162-951 (SHT 01 OF 12)			
<div>HANDLING, STORING, AND PROTECTION OF ALUMINUM</div> <div>The material must be protected against damage. The following precautions are recommended to assure early acceptance of your products and workmanship.</div> <div>A. HANDLE CAREFULLY - Don't drop from the truck. Stack with adequate separation so material will not rub together. Store off the ground. Protect against elements and other construction trades. Wear hand protection to prevent injury due to sharp edges of cut extrusions.</div> <div>B. KEEP MATERIAL AWAY FROM WATER, MUD AND SPRAY - Prevent cement, plaster, or other materials from damaging the finish.</div> <div>C. PROTECT THE MATERIALS AFTER ERECTION - Protect by wrapping with Kraft paper or by erecting Visqueen or canvas splatter screen. Cement, plaster, terrazzo, other alkaline solutions and acid based materials used to clean masonry are very harmful to the finish and should be removed with water and mild soap IMMEDIATELY.</div> <div>GENERAL INSTALLATION NOTES</div> <div>The following practices are recommended for all installations:</div> <div>A. CHECK SHOP DRAWINGS, INSTALLATION INSTRUCTIONS and GLAZING INSTRUCTIONS to become thoroughly familiar with the project. The SHOP DRAWINGS take precedence and include specific details for the project. The INSTALLATION INSTRUCTIONS are of a general nature and cover most common conditions.</div> <div>B. All materials are to be INSTALLED PLUMB, LEVEL, AND TRUE.</div> <div>C. All work should start from bench marks and/or column lines as established by the ARCHITECTURAL DRAWINGS and the GENERAL CONTRACTOR. Check mullion spacing from both ends of the masonry opening to prevent dimensional buildup of day light opening.</div> <div>D. Make certain that construction which will receive your materials is in accordance with the contract documents. If not, notify the GENERAL CONTRACTOR IN WRITING and resolve differences before proceeding with your work.</div> <div>E. Isolate all aluminum to be placed directly in contact with uncured masonry or incompatible materials with a heavy coat of zinc chromate or bituminous paint.</div> <div>F. Check all materials on arrival for quantity and be sure you have everything required to begin installation.</div> <div>G. Sealants must be compatible with all materials with which they have contact, including other sealant surfaces. Consult with sealant manufacturer for recommendations relative to joint size, shelf life, compatibility, priming, tooling, adhesion, etc.</div> <div>H. FASTENING - "Fastening" means any method of securing one part to another or to adjacent materials. These instructions specify only those fasteners used within the system. Due to varying perimeter conditions and job performance requirements, anchor fasteners are not specified in these instructions. For anchor fastening, refer to the Shop Drawings or consult the fastener supplier.</div>		<div>1600 SYSTEM² NOTES</div> <div>1600 SYSTEM² is available with 1" framing members which accept 1 5/16" Infills. Also, 1/4" framing members which accept 9/16" infill are available.</div> <div>THESE INSTRUCTIONS ARE BASED ON LARGE MISSLE IMPACT INSTALLATION. For small missile impact reference page 12.</div> <div>The term "captured verticals" or "captured horizontals" will be used throughout these instructions. This means framing members that accept exterior pressure plates and covers. "Structural glazed verticals" do not accept exterior metal.</div> <div>Glass bite is 3/4" at captured verticals and horizontals on large missile and 1/2" on small missile. Glass bite is 1" at structural glazed verticals. Glass sizes must be calculated from approved shop drawings.</div> <div>Refer to corresponding test drawings for sealant and anchor information. Test may be job specific, so please contact a Kawneer representative for correct test reports and drawings.</div> <div>Unless otherwise specified, it is recommended that silicone sealant be used for all internal seals.</div> <div>Sealant must be applied per the sealant manufacturer's recommendations and pass all adhesion and compatibility testing. At all joint seals, sealant must adhere to metal, gaskets, thermal separator and joint plug materials. Clean all surfaces prior to application of sealant and prime where necessary to achieve proper adhesion.</div> <div>Shim all sill horizontals at setting block locations.</div> <div>Hurricane impact curtain walls require labels to be applied after assembly, glazing and installation. These labels identify that the curtain walls have been assembled and glazed as tested for hurricane impact. Every floor level of each elevation of a curtain wall requires a label. As viewed from the interior, labels shall be placed on the right side bay on the right side underside surface of a low lying horizontal, or in the right upper inside vertical surface close to the corner if there are no intermediate horizontal members. Labels are to be applied by the glazing contractor.</div> <div>VERTICAL MULLION SPLICE - Vertical mullions that are structurally glazed must be spliced at a horizontal location. Location of this splice must be reviewed for structural integrity by factory engineering.</div> <div>TYPICAL SPLICE CONDITION AT EXPANSION HORIZONTAL</div> <div></div>		<div>CONFIDENTIAL AND PROPRIETARY INFORMATION KAWNEER COMPANY INC.</div> <div>THESE DRAWINGS ARE THE SOLE AND EXCLUSIVE PROPERTY OF KAWNEER AND CONTAIN SENSITIVE, PRIVILEGED OR CONFIDENTIAL INFORMATION WHICH MAY BE USED ONLY FOR ITS BENEFIT. THE DISCLOSURE OF THESE DRAWINGS TO UNAUTHORIZED PERSONS IS STRICTLY PROHIBITED. THIS DOCUMENT AND ALL COPIES MUST BE RETURNED UPON DEMAND. © COPYRIGHT KAWNEER COMPANY, INC., 2008</div> <div>STRUCTURAL SEAL NOTES</div> <div>STRUCTURAL SILICONE SEAL - THE GLAZING INSTALLER IS RESPONSIBLE FOR SELECTING AND CONTACTING THE SILICONE MANUFACTURER TO DETERMINE WHICH TYPE OF SILICONE IS TO BE USED AND WHAT SAMPLES ARE REQUIRED TO BE SUBMITTED FOR ADHESION AND COMPATIBILITY TESTING.</div> <div>THE SILICONE SEALANT SHALL NOT BE APPLIED TO KAWNEER PRODUCTS WITHOUT THE APPROVAL OF THE SILICONE MANUFACTURER AND UNTIL ALL REQUIRED TESTING IS COMPLETED AND DETAILED APPLICATION INSTRUCTIONS HAVE BEEN DELIVERED TO THE INSTALLER BY THE SILICONE MANUFACTURER.</div> <div>IF YOU FIND THE SILICONE MANUFACTURER'S INSTALLATION INSTRUCTIONS ARE NOT IN ACCORDANCE WITH KAWNEER'S INSTALLATION INSTRUCTIONS, IT IS YOUR RESPONSIBILITY TO NOTIFY KAWNEER OF THIS CONFLICT PRIOR TO GLAZING.</div> <div>YOUR GLASS SUPPLIER MUST BE MADE AWARE THAT THEIR GLASS WILL BE USED IN A SSG APPLICATION. THE APPLICATION MUST BE APPROVED BY THE GLASS SUPPLIER PRIOR TO GLAZING.</div> <div>ANY STRUCTURAL SILICONE GLAZED PRODUCT APPLICATION THAT IS NOT SHOWN IN KAWNEER'S STANDARD PRODUCT LITERATURE MUST BE PRE-APPROVED BY KAWNEER.</div> <div>EXTERIOR GLASS WEATHER SEAL - SEALANT TO BE A TYPE AS RECOMMENDED BY THE MANUFACTURER OF THE STRUCTURAL SEALANT BEING USED FOR THIS PROJECT.</div> <div>SEALANT MUST BE APPLIED PER THE SEALANT MANUFACTURER'S RECOMMENDATIONS. WEATHER SEAL SEALANT MUST ADHERE TO EXTERIOR GASKET MATERIAL.</div>	
<div>KAWNEER</div>		1600 SYSTEM 2 IMPACT INSTALLATION INSTRUCTIONS			
Product Engineering & Development					
95449-87 02/17/12	162-951 (SHT 01 OF 12)				



GENERAL IMPACT INSTALLATION INSTRUCTIONS; FOR JOB SPECIFIC APPLICATION, PLEASE CONTACT FACTORY TO VERIFY THAT SYSTEM MEETS APPLICABLE CODES.

OPEN BACK HORIZONTAL NOTES

THE OPEN BACK HORIZONTAL IS TO BE TYPICALLY USED FOR ALL HEAD/SILL AND LAST BAY INTERMEDIATE HORIZONTALS.



THE OPEN BACK HORIZONTAL CAN BE USED AT OTHER CONDITIONS IF IT IS AN ADVANTAGE TO THE JOB DESIGN.

THE SHEAR BLOCK AT ALL OPEN BACK INTERMEDIATE HORIZONTALS HAS THE OPTION TO BE PRE-INSTALLED INTO THE HORIZONTAL BEFORE HORIZONTALS ARE INSTALLED

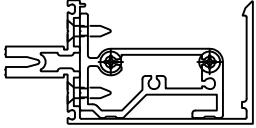



OPEN SIDE UP

HEAD CONDITION

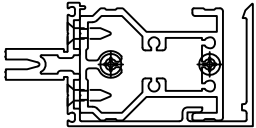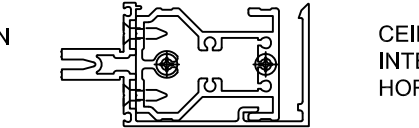



OPEN SIDE UP

CEILING INTERMEDIATE HORIZONTALS

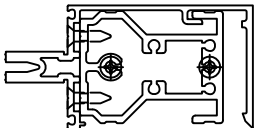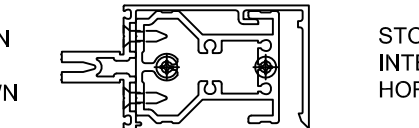

OPEN SIDE DOWN

STOOL INTERMEDIATE HORIZONTALS

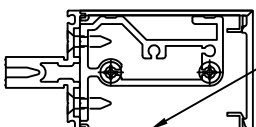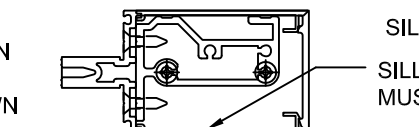


OPEN SIDE DOWN

SILL CONDITION

SILL HORIZONTALS MUST BE SHIMMED

WHEN THE OPEN SIDE OF THE OPEN BACK HORIZONTAL IS EXPOSED AND AT EYE LEVEL A SNAP-IN FILLER IS AVAILABLE.

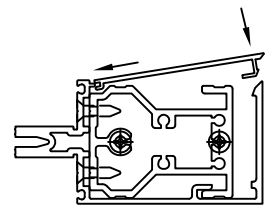

WHEN THE SNAP-IN FILLER IS NOT USED, AND DUE TO STANDARD COMMERCIAL EXTRUDING TOLERANCES, IT MAY BE REQUIRED TO USE A 4" PIECE OF THE FILLER AT EACH END OF A HORIZONTAL.

USE PART 162-316 FOR THE 6" DEEP SYSTEM
USE PART 162-317 FOR THE 7-1/2" DEEP SYSTEM

REFERENCE INSTRUCTIONS 162-983 FOR EXTERIOR FRAME PERIMETERS

STEP - 1 CHECK OPENINGS



ELEVATIONS AND SLABS MUST BE WITHIN ADJUSTMENT OF ANCHORING SYSTEM. SEE APPROVED SHOP DRAWINGS FOR ALLOWABLE ADJUSTMENT.

ANCHORING SURFACES OF PERIMETER CONSTRUCTION MUST BE LEVEL AND PLUMB WITHIN THE ADJUSTMENT LIMITS OF THE HEAD, SILL AND JAMB. SEE APPROVED SHOP DRAWINGS FOR ALLOWABLE ADJUSTMENT.

STEP - 2 LAY OUT ANCHOR AND MULLION CENTERLINES



USE WALL LINES ESTABLISHED BY THE GENERAL CONTRACTOR. ON EACH FLOOR LAY OUT A REFERENCE LINE TO ESTABLISH IN AND OUT WALL LOCATIONS.

USE COLUMN CENTER LINES ESTABLISHED BY THE GENERAL CONTRACTOR. ON EACH FLOOR LAY OUT MULLION CENTER LINES AND ANCHOR CENTER LINES.



EXTERIOR FACE OF BEAM OR FLOOR SLAB

JOB VARIES WITH CONDITIONS

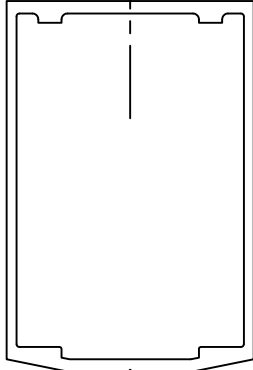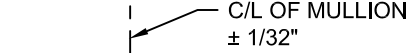

C/L OF MULLION ± 1/32"

166-041 MULLION SHOWN

SEE APPROVED SHOP DRAWINGS FOR ANCHOR LAYOUTS

STEP - 3 INSTALL PRESET ANCHORS IF APPLICABLE

USING LOCATION LINES PREVIOUSLY ESTABLISHED, INSTALL PRESET ANCHORS IN PLACE PER APPROVED SHOP DRAWINGS.

STEP - 4 FRAME ASSEMBLY


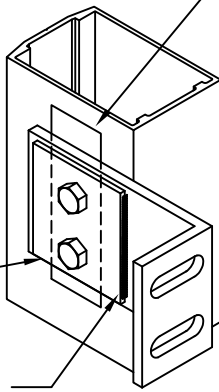
ATTACH ANCHORS TO MULLIONS WHERE APPLICABLE.

ANCHOR PREP MAY BE FABRICATED IN THE FIELD OR FACTORY. CONSULT APPROVED SHOP DRAWINGS FOR CORRECT METHOD.

STANDARD ANCHOR PREP IS THRU-BOLTED AT INTERMEDIATE VERTICALS AND TAPPING PLATES ARE USED AT JAMB VERTICALS. REFER TO APPROVED SHOP DRAWINGS FOR CORRECT METHOD.

WHEN WELDING ANCHORS, PROTECT INSTALLED GLASS AND METAL FROM WELD SPLATTER.

DETAILS SAME FOR "CAPTURED VERTICALS"



027-477 SEPARATOR BETWEEN ANCHOR AND MULLION

WELD PLATE

SIZE AND SPACING OF WELD PER APPROVED SHOP DRAWINGS

DO NOT OVER TIGHTEN ANCHOR CONNECTIONS. TIGHTEN TO A "SNUG TIGHT" POSITION WITH PARTS BROUGHT INTO GOOD CONTACT. BE SURE ANY SPRING TYPE LOCK WASHERS ARE COMPRESSED. THEN TIGHTEN APPROXIMATELY 1/2 MORE TURN.

162-951 (SHT 02 OF 12)


CONFIDENTIAL AND PROPRIETARY INFORMATION
KAWNEER COMPANY INC.

THESE DRAWINGS ARE THE SOLE AND EXCLUSIVE PROPERTY OF KAWNEER AND CONTAIN SENSITIVE, PRIVILEGED OR CONFIDENTIAL INFORMATION WHICH MAY BE USED ONLY FOR ITS BENEFIT. THE DISCLOSURE OF THESE DRAWINGS TO UNAUTHORIZED PERSONS IS STRICTLY PROHIBITED. THIS DOCUMENT AND ALL COPIES MUST BE RETURNED UPON DEMAND.
© COPYRIGHT KAWNEER COMPANY, INC., 2008


STEP - 4 FRAME ASSEMBLY

ATTACH SHEAR BLOCKS.
STRUCTURAL GLAZED VERTICAL

DETAILS SIMILAR FOR "CAPTURED VERTICALS"

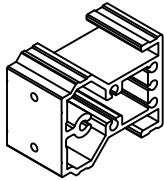


TYPICAL INTERMEDIATE SHEAR BLOCKS
162-377 6" SYSTEM
162-378 7 1/2" SYSTEM

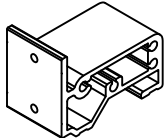


HEAD AND SILL SHEAR BLOCKS
162-331 6" SYSTEM
162-332 7 1/2" SYSTEM

REFERENCE INSTRUCTIONS 162-983 FOR EXTERIOR FRAME PERIMETERS
HEAD AND SILL SHEAR BLOCKS
162-384 6" SYSTEM
162-385 7 1/2" SYSTEM

ATTACH SHEAR BLOCKS.

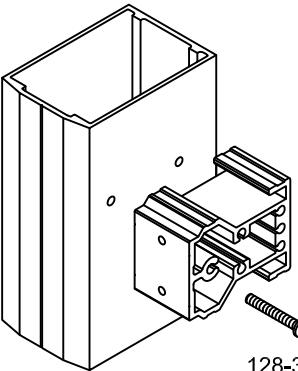

128-394 SCREWS
#12 x 1 7/8"
PAN HEAD TYPE B

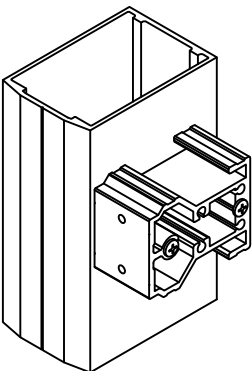

STRUCTURAL INTEGRITY OF ANCHOR AND FASTENERS MUST BE CHECKED BY FACTORY ENGINEERS.



1600 SYSTEM 2
IMPACT
INSTALLATION
INSTRUCTIONS


Product Engineering & Development

95449-094
04/26/13

162-951 (SHT 02 OF 12)

GENERAL IMPACT INSTALLATION INSTRUCTIONS; FOR JOB SPECIFIC APPLICATION, PLEASE CONTACT FACTORY TO VERIFY THAT SYSTEM MEETS APPLICABLE CODES.

STEP - 5 INSTALL 162-310 THERMAL BREAK




162-310


CAPTURED VERTICALS/ HORIZONTALS

DO NOT STRETCH WHEN REMOVING FROM COIL AND CARTON

DO NOT STRETCH DURING INSTALLATION

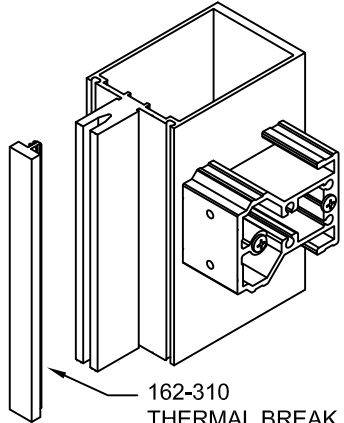


162-310 THERMAL BREAK

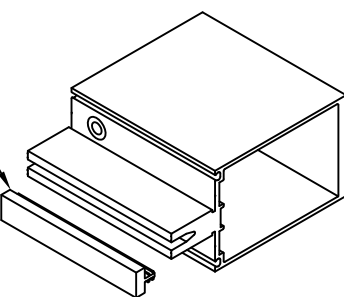

162-310 THERMAL BREAK

OPTION TO INSTALL THERMAL BREAK AFTER VERTICALS AND HORIZONTALS ARE INSTALLED

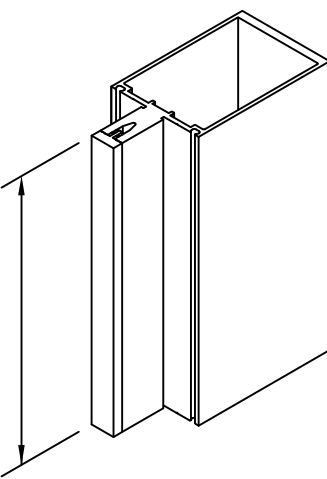


THERMAL BREAK TO BE SAME LENGTH AS VERTICAL MULLIONS

STEP - 5 INSTALL 162-310 THERMAL BREAK


NOTE

THERMAL BREAK TO BE THE SAME LENGTH AS THE HORIZONTAL AT STRUCTURAL GLAZED VERTICALS

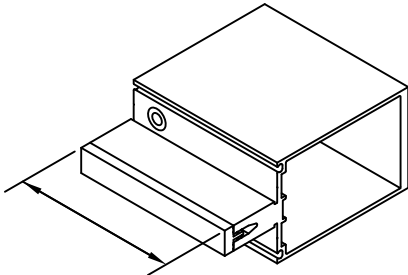


NOTE

THERMAL BREAK TO BE 1/4" SHORT AT EACH END OF HORIZONTAL AT CAPTURED VERTICALS

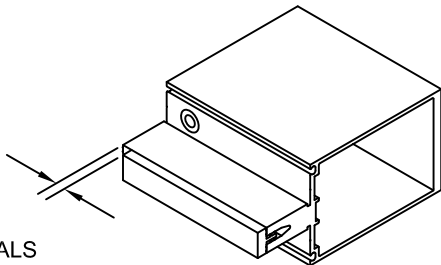

INSTALL JAMB END CAPS AT JAMB SIDE ONLY WITH 130-608 DOUBLE SIDED TAPE AS SHOWN BELOW.

162-541 1" FRAMING
162-542 1/4" FRAMING

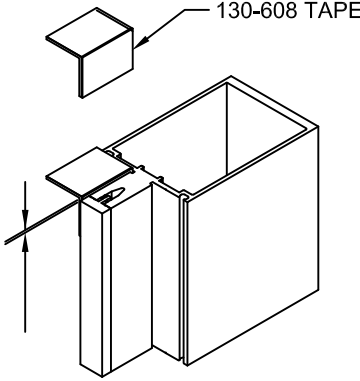


130-608 TAPE

JAMB END CAP TO BE A 1/16" ABOVE AND BELOW VERTICAL AT HEAD AND SILL

NOT REQUIRED AT EXTERIOR FRAME PERIMETERS SHOWN IN INSTRUCTIONS 162-983 AND AT OPTIONAL PERIMETER FILLERS 162-022 AND 162-023.

STEP - 6 PERIMETERS WHERE APPLICABLE

INSTALL PERIMETER MEMBERS PER APPROVED SHOP DRAWINGS. PERIMETER MEMBERS CAN OCCUR AT HEAD, SILL OR JAMB CONDITIONS.

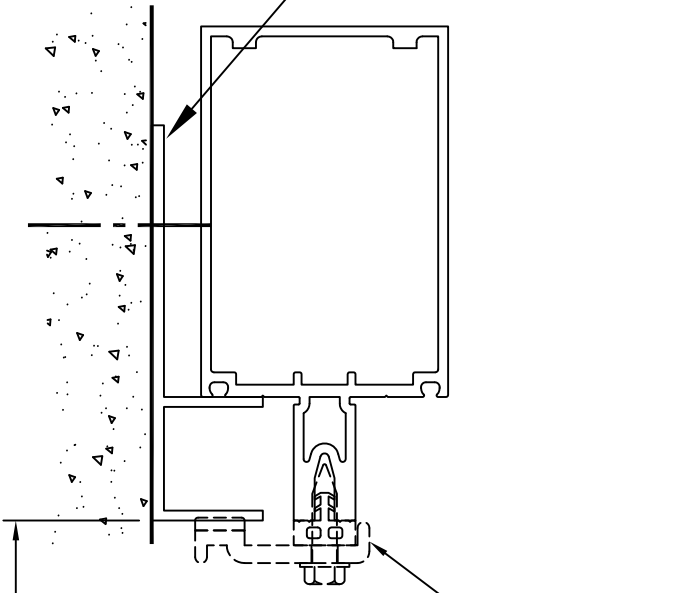

CONTINUOUS "F" PERIMETER
162-017 1 5/16" GLASS
162-176 9/16" GLASS

BENCHMARK TO FACE OF PERIMETER MEMBER PER APPROVED SHOP DRAWINGS

USE GLAZING 162-350 TEMPORARIES WITH 128-406 SCREWS.

MAXIMUM TEMPORARY SPACING IS 30". IF MORE THAN A 50 MPH (80KPH) WIND IS EXPECTED, INSTALL PRESSURE PLATES.


CONFIDENTIAL AND PROPRIETARY INFORMATION
KAWNEER COMPANY INC.

THESE DRAWINGS ARE THE SOLE AND EXCLUSIVE PROPERTY OF KAWNEER AND CONTAIN SENSITIVE, PRIVILEGED OR CONFIDENTIAL INFORMATION WHICH MAY BE USED ONLY FOR ITS BENEFIT. THE DISCLOSURE OF THESE DRAWINGS TO UNAUTHORIZED PERSONS IS STRICTLY PROHIBITED. THIS DOCUMENT AND ALL COPIES MUST BE RETURNED UPON DEMAND.
© COPYRIGHT KAWNEER COMPANY, INC., 2008

STEP - 7 INSTALL VERTICAL MULLIONS

DIMENSION BUILDUP CHECK

CHECK OVERALL FRAME DIMENSIONS ABOUT EVERY FIVE MULLIONS ON LONG RUNS. THIS IS TO AVOID DIMENSION BUILDUP.

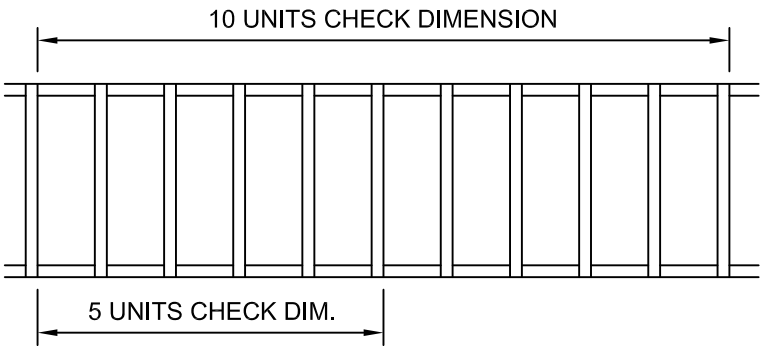

1600 SYSTEM 2
IMPACT
INSTALLATION
INSTRUCTIONS

Product Engineering & Development

95449-72
02/27/09

GENERAL IMPACT INSTALLATION INSTRUCTIONS; FOR JOB SPECIFIC APPLICATION, PLEASE CONTACT FACTORY TO VERIFY THAT SYSTEM MEETS APPLICABLE CODES.

STEP - 7 INSTALL VERTICAL MULLIONS

STRUCTURAL GLAZED VERTICALS

DETAILS SIMILAR FOR "CAPTURED VERTICALS"

"F" OR "T" ANCHORS WHERE APPLICABLE


"F" AND "T" ANCHOR FASTENER LOCATIONS PER APPROVED SHOP DRAWINGS

REFERENCE INSTRUCTIONS 162-983 FOR EXTERIOR FRAME PERIMETERS

THESE SHEAR BLOCKS MAY NEED TO BE REMOVED TO INSTALL A ANCHOR FASTENER THAT MIGHT BE LOCATED CLOSE TO THE MULLION

"F" AND "T" ANCHOR FASTENER LOCATIONS PER APPROVED SHOP DRAWINGS


AT MULLION JAMB SIDE, APPLY (2) 128-396 SCREWS AS SHOWN TO CENTER F-CLIPS AS REQUIRED.

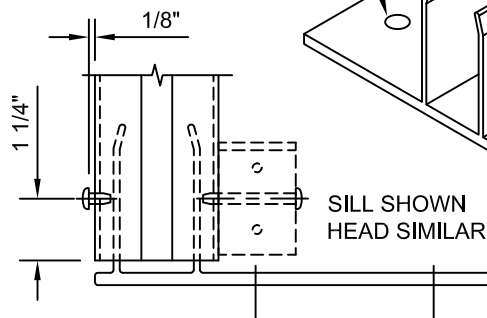


STEP - 7 INSTALL VERTICAL MULLIONS

VERTICAL SPLICE JOINTS WHERE APPLICABLE.

CAPTURED VERTICALS

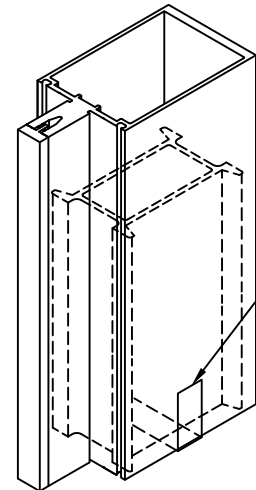

SLEEVE IS FACTORY TAPED INTO THE BOTTOM OF THE TOP VERTICAL.

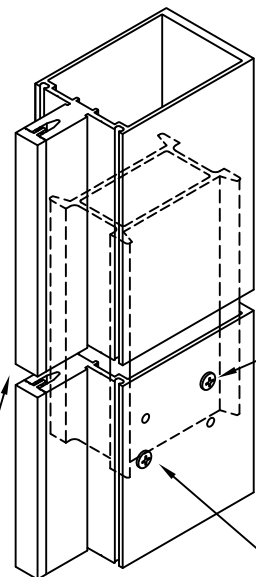


REMOVE THE TAPE AND LET THE SLEEVE SLIDE DOWN TO THE FACTORY APPLIED STOP SCREW

FIELD APPLIED FIXING SCREW 128-348 #10 x 1 1/4" FLAT HEAD SELF DRILLING.

SHOP APPLIED STOP SCREW 128-267 #12 x 1" PAN HEAD TYPE AB

USE TEMPORARY SPACERS FOR JOINT DIMENSION


NOTE: SPLICE SHOULD BE LOCATED AT A EXPANSION HORIZONTAL CENTERLINE LOCATION.

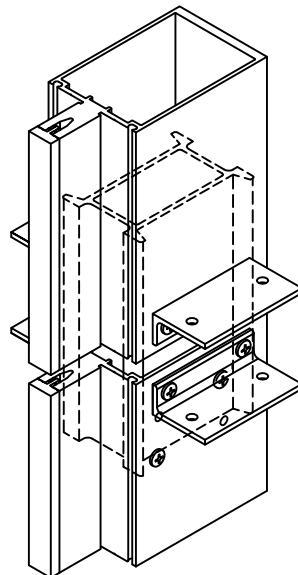


STEP - 7 INSTALL VERTICAL MULLIONS

VERTICAL SPLICE JOINTS WHERE APPLICABLE.

STRUCTURAL GLAZED VERTICALS

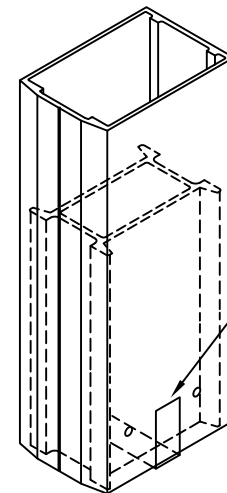

SLEEVE IS FACTORY TAPED INTO THE BOTTOM OF THE TOP VERTICAL.

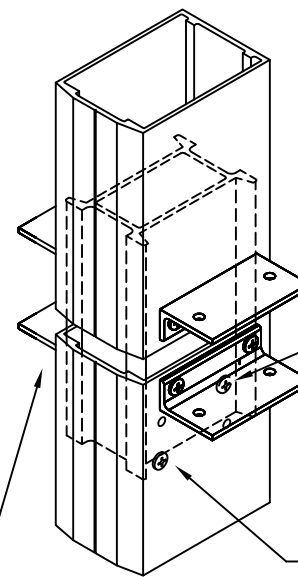

REMOVE THE TAPE AND LET THE SLEEVE SLIDE DOWN TO THE FACTORY APPLIED STOP SCREW.

FIELD APPLIED FIXING SCREW 128-348 #10 x 1 1/4" FLAT HEAD SELF DRILLING.

SHOP APPLIED STOP SCREW 128-267 #12 x 1" PAN HEAD TYPE AB

USE TEMPORARY SPACERS FOR JOINT DIMENSION

NOTE: SPLICE SHOULD BE LOCATED AT A EXPANSION HORIZONTAL CENTERLINE LOCATION.

162-951 (SHT 04 OF 12)

CONFIDENTIAL AND PROPRIETARY INFORMATION KAWNEER COMPANY INC.

THESE DRAWINGS ARE THE SOLE AND EXCLUSIVE PROPERTY OF KAWNEER AND CONTAIN SENSITIVE, PRIVILEGED OR CONFIDENTIAL INFORMATION WHICH MAY BE USED ONLY FOR ITS BENEFIT. THE DISCLOSURE OF THESE DRAWINGS TO UNAUTHORIZED PERSONS IS STRICTLY PROHIBITED. THIS DOCUMENT AND ALL COPIES MUST BE RETURNED UPON DEMAND. © COPYRIGHT KAWNEER COMPANY, INC., 2008



Product Engineering & Development

95449-71
12/15/08

1600 SYSTEM 2
IMPACT
INSTALLATION
INSTRUCTIONS


162-951 (SHT 04 OF 12)

GENERAL IMPACT INSTALLATION INSTRUCTIONS; FOR JOB SPECIFIC APPLICATION, PLEASE CONTACT FACTORY TO VERIFY THAT SYSTEM MEETS APPLICABLE CODES.

STEP - 8 INSTALL HEAD/SILL AND INTERMEDIATE HORIZONTALS

TUBULAR HORIZONTALS

STRUCTURAL GLAZED VERTICALS

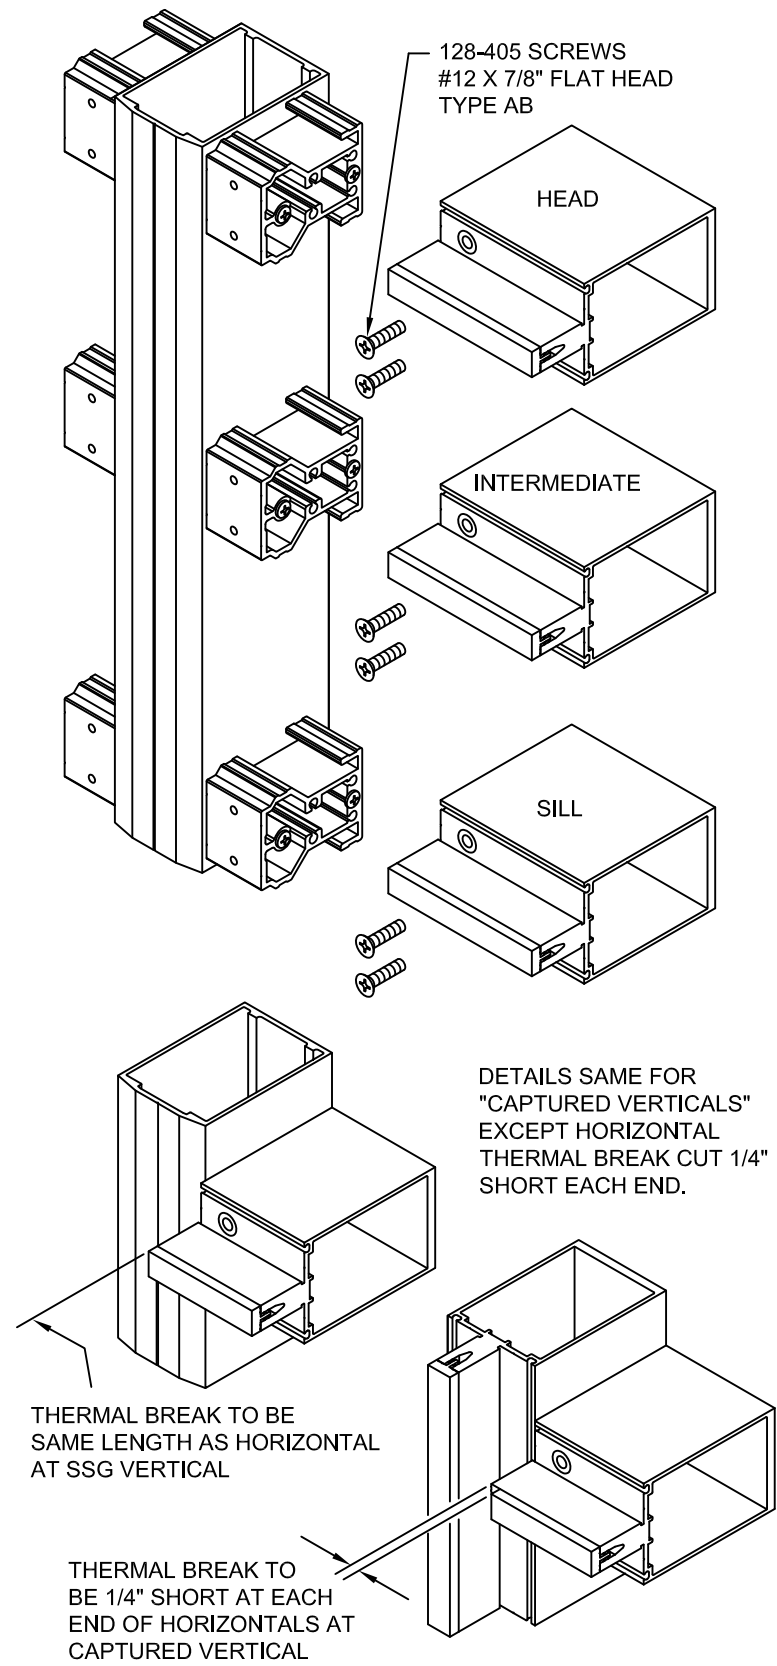


STEP - 8 INSTALL HEAD/SILL AND INTERMEDIATE HORIZONTALS

REFERENCE INSTRUCTIONS 162-983 FOR EXTERIOR FRAME PERIMETERS


OPEN BACK HORIZONTALS AND LAST BAY HORIZONTALS.
FILLER AVAILABLE WHEN OPEN BACK IS EXPOSED AND AT EYE LEVEL.

STRUCTURAL GLAZED VERTICALS


DETAILS SAME FOR "CAPTURED VERTICALS" EXCEPT HORIZONTAL THERMAL BREAK CUT 1/4" SHORT EACH END.

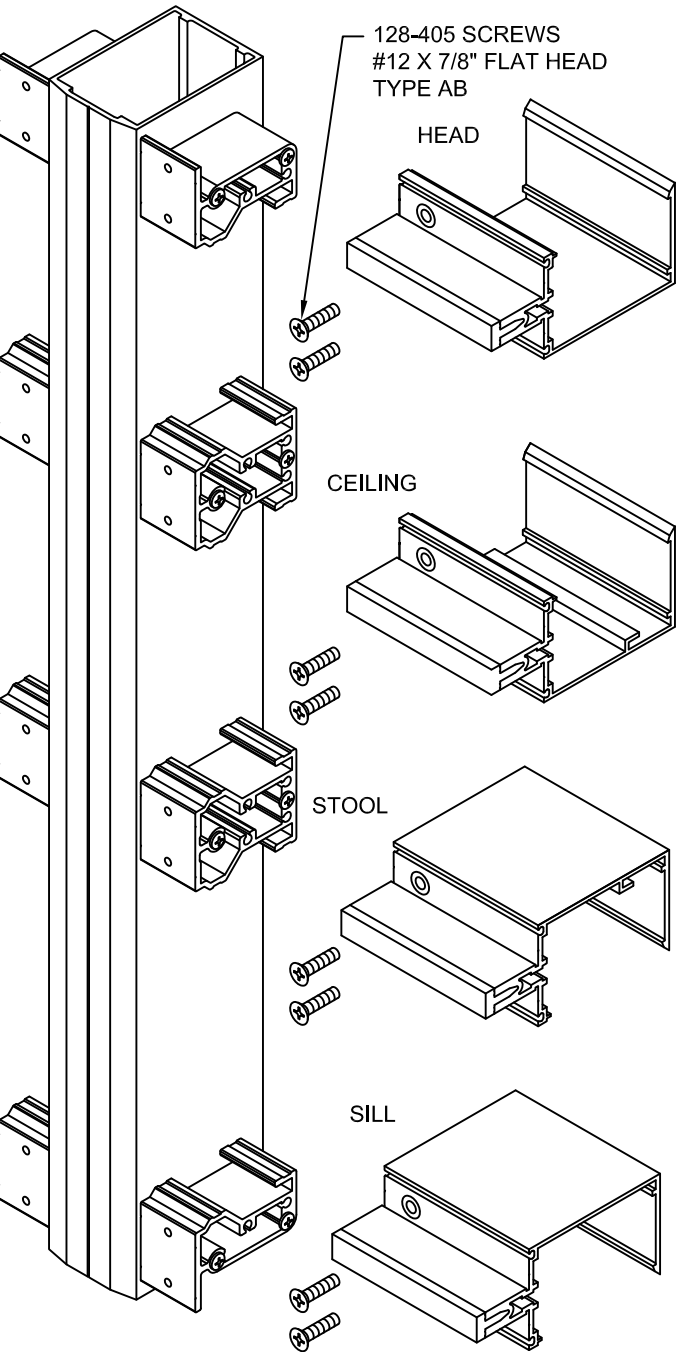

INSTALLING CEILING INTERMEDIATE
OPEN BACK HORIZONTAL

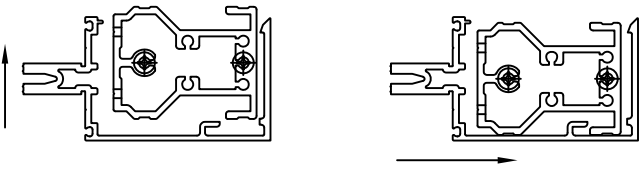

INSTALLING STOOL INTERMEDIATE
OPEN BACK HORIZONTAL

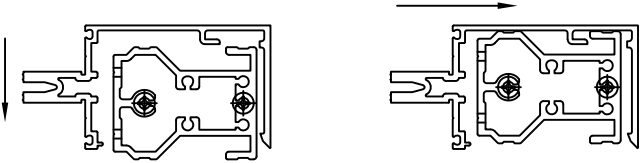


STEP - 9 INSTALL JOINT PLUGS

CAPTURED VERTICALS

ALL SURFACES AND GROOVES MUST BE CLEANED PER THE SEALANT MANUFACTURER'S RECOMMENDATIONS.

JUST BEFORE INSTALLING JOINT PLUGS, APPLY SEALANT AS SHOWN FILLING GASKET POCKET AND ADAPTER GROOVE.

AT INTERMEDIATES

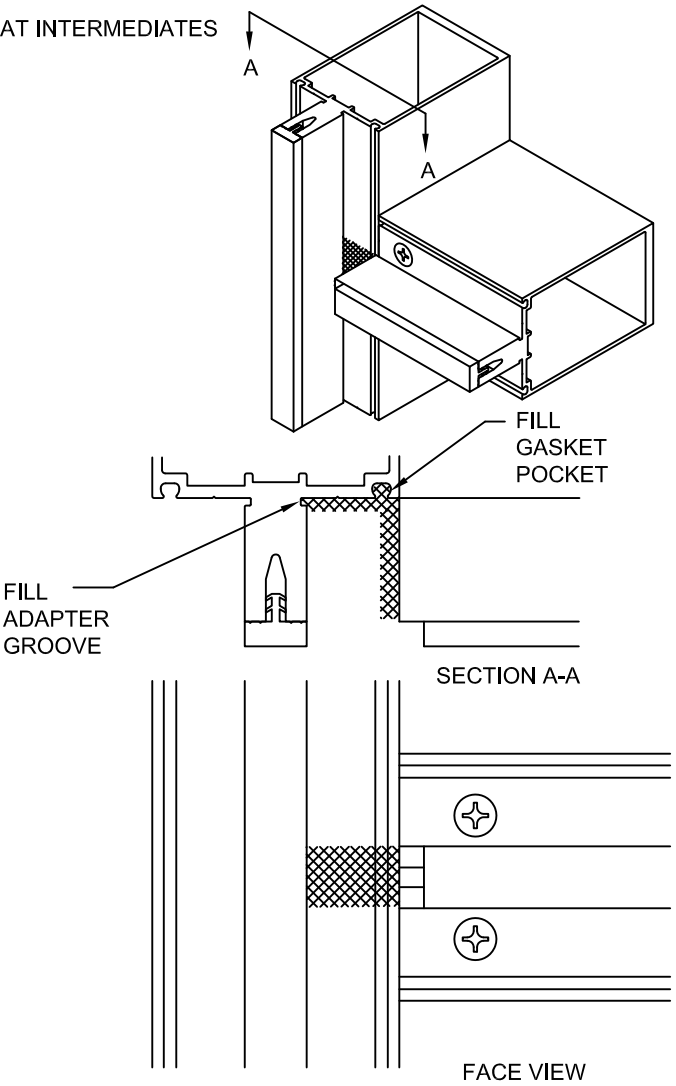

162-951 (SHT 05 OF 12)


CONFIDENTIAL AND PROPRIETARY INFORMATION
KAWNEER COMPANY INC.

THESE DRAWINGS ARE THE SOLE AND EXCLUSIVE PROPERTY OF KAWNEER AND CONTAIN SENSITIVE, PRIVILEGED OR CONFIDENTIAL INFORMATION WHICH MAY BE USED ONLY FOR ITS BENEFIT. THE DISCLOSURE OF THESE DRAWINGS TO UNAUTHORIZED PERSONS IS STRICTLY PROHIBITED. THIS DOCUMENT AND ALL COPIES MUST BE RETURNED UPON DEMAND.
© COPYRIGHT KAWNEER COMPANY, INC., 2008

STEP - 9 INSTALL JOINT PLUGS

CAPTURED VERTICALS

JOINT PLUG
162-539 1 5/16" FRAMING (SHOWN)
162-540 9/16" FRAME MEMBERS

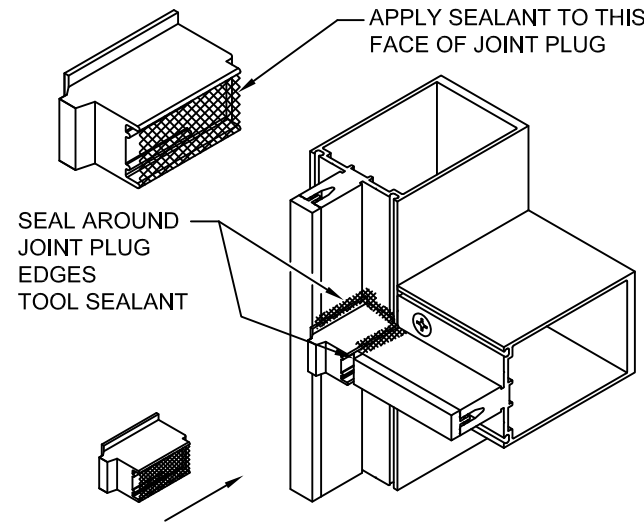

Product Engineering & Development

95449-71
12/15/08

1600 SYSTEM 2
IMPACT
INSTALLATION
INSTRUCTIONS



162-951 (SHT 05 OF 12)

GENERAL IMPACT INSTALLATION INSTRUCTIONS; FOR JOB SPECIFIC APPLICATION, PLEASE CONTACT FACTORY TO VERIFY THAT SYSTEM MEETS APPLICABLE CODES.


STEP - 9 INSTALL JOINT PLUGS

CAPTURED VERTICALS

AT HEAD AND SILL

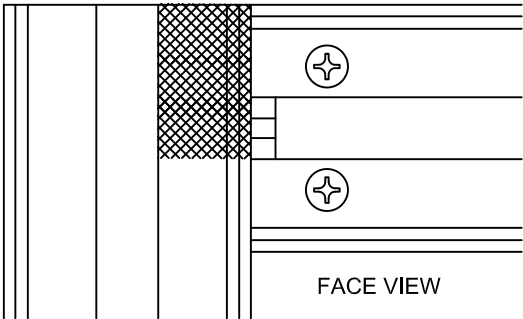
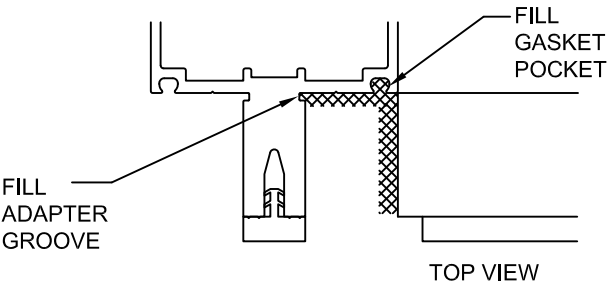


HEAD AND SILL JOINT PLUG
162-529 1 5/16" FRAMING (SHOWN)
162-524 9/16" FRAMING

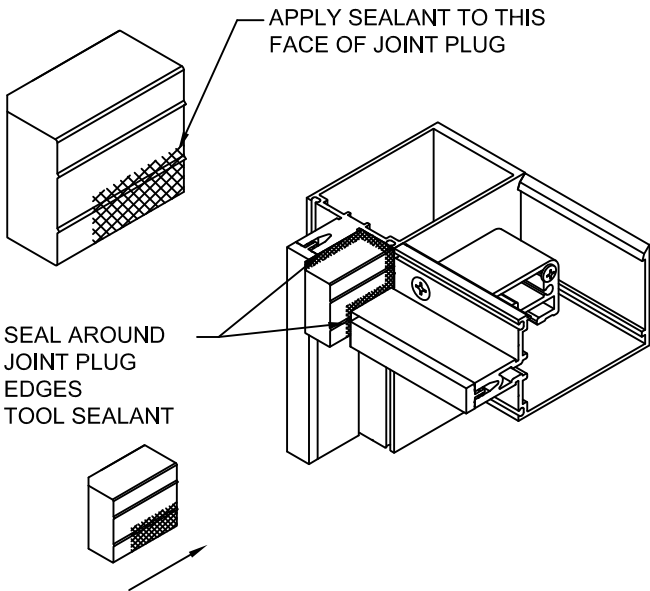

STEP - 9 INSTALL JOINT PLUGS

STRUCTURAL GLAZED VERTICALS

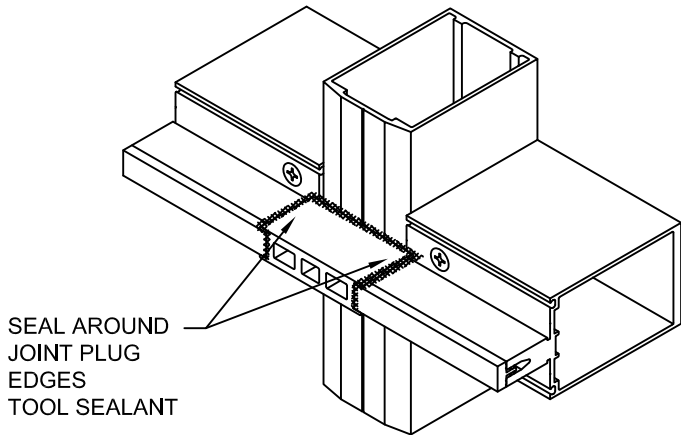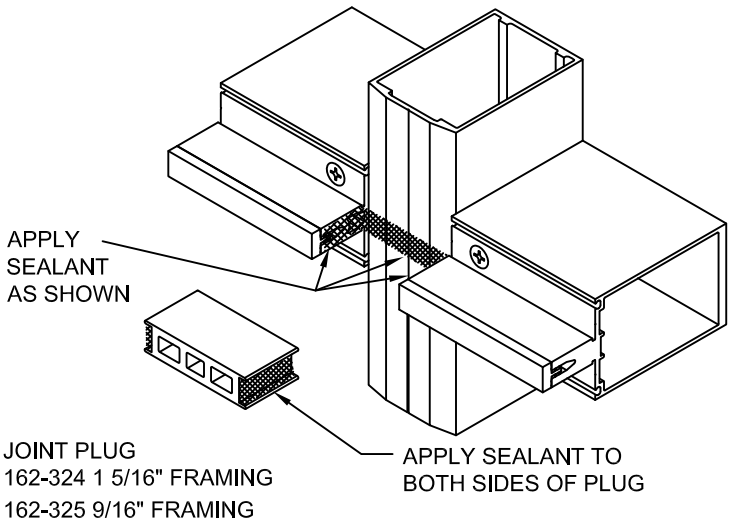


STEP - 10 SEAL INTERIOR OF VERTICAL SPLICE JOINTS AND INSTALL JOINT PLUGS AT EXPANSION HORIZONTALS

CAPTURED VERTICALS

AT EXPANSION HORIZONTALS

EXPANSION HORIZONTAL NOT SHOWN FOR CLARITY

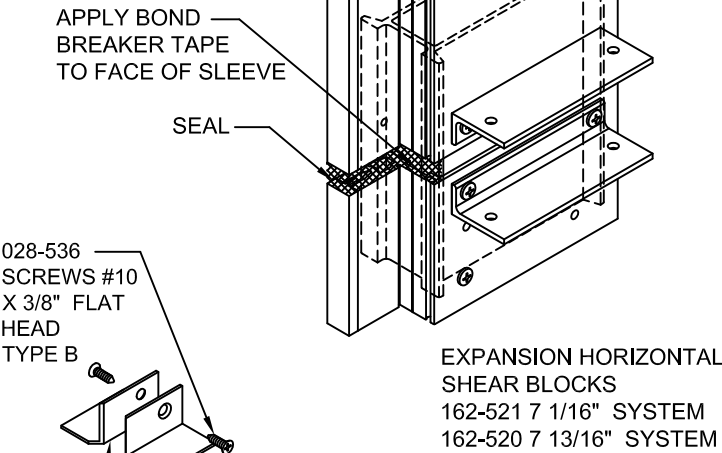

028-536
SCREWS #10
X 3/8" FLAT
HEAD
TYPE B

162-536
162-535
1 5/16" JOINT PLUGS

SEAL AROUND
JOINT PLUG
EDGES AND SEAL
OVER SCREW
HEAD, TOOL
SEALANT.

028-536
SCREWS #10
X 3/8" FLAT
HEAD
TYPE B

162-523
162-522
9/16" JOINT PLUGS

JOINT PLUG FOR
EXPANSION HORIZONTAL
MULLION. (1 5/16" SHOWN)

APPLY
WITH
028-536
SCREWS


STEP - 10 SEAL INTERIOR OF VERTICAL SPLICE JOINTS AND INSTALL JOINT PLUGS AT EXPANSION HORIZONTALS

ALL SURFACES AND GROOVES MUST BE CLEANED PER THE SEALANT MANUFACTURER'S RECOMMENDATIONS.

APPLY BACKER ROD AND SEALANT BETWEEN EXPANSION HORIZONTALS. RETURN SEAL AT ENDS AND MARRY TO SEAL BETWEEN HORIZONTALS AND MULLION SPLICE SEAL AT FACE OF MULLION TUBE.

EXPANSION JOINT
LOCATED AT A
HORIZONTAL

DO NOT LET
SEALANT INTERFERE
WITH COVER SNAP.

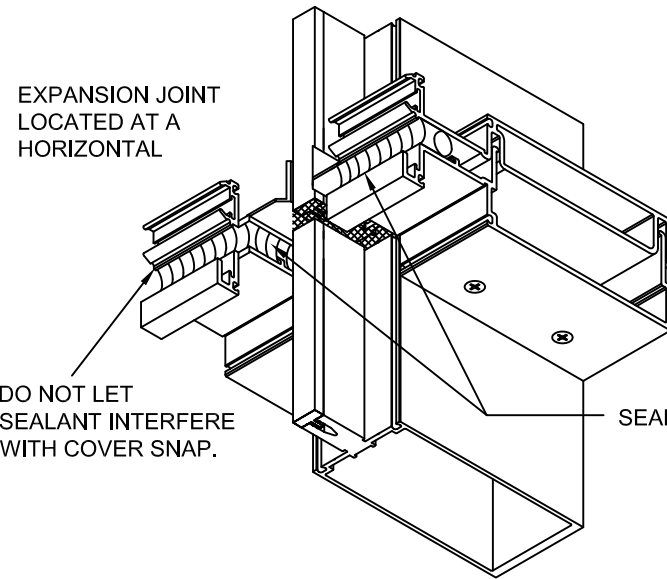

KAWNEER

Product Engineering & Development

95449-094
04/26/13

1600 SYSTEM 2
IMPACT
INSTALLATION
INSTRUCTIONS

162-951 (SHT 06 OF 12)

GENERAL IMPACT INSTALLATION INSTRUCTIONS; FOR JOB SPECIFIC APPLICATION, PLEASE CONTACT FACTORY TO VERIFY THAT SYSTEM MEETS APPLICABLE CODES.

STEP - 10 SEAL INTERIOR OF VERTICAL SPLICE JOINTS AND INSTALL JOINT PLUGS AT EXPANSION HORIZONTALS


STRUCTURAL GLAZED VERTICALS

AT EXPANSION HORIZONTALS


EXPANSION HORIZONTAL NOT SHOWN FOR CLARITY

APPLY BOND BREAKER TAPE TO FACE OF SLEEVE

SEAL

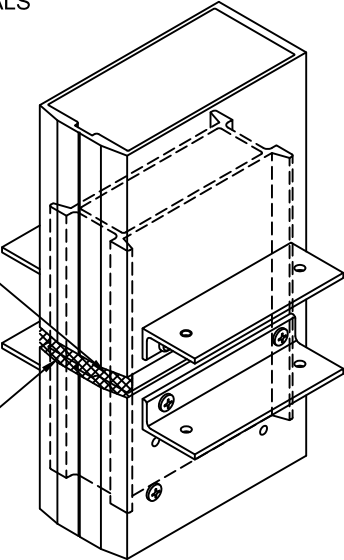


ASSEMBLE SSG EXPANSION HORIZONTAL SPLICE AS SHOWN

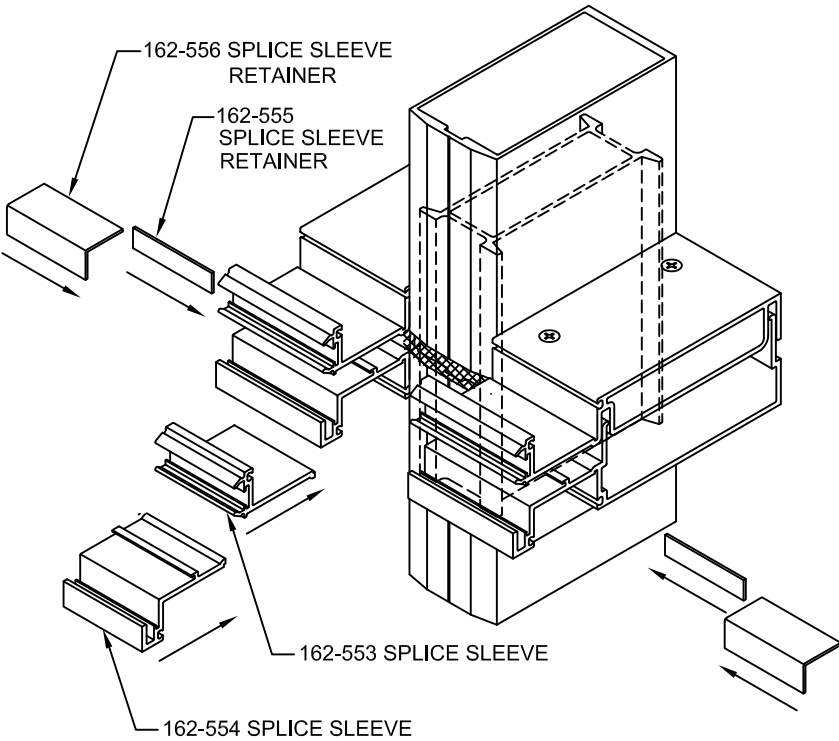

STEP - 10 SEAL INTERIOR OF VERTICAL SPLICE JOINTS AND INSTALL JOINT PLUGS AT EXPANSION HORIZONTALS

STRUCTURAL GLAZED VERTICALS


SEAL ALL SPLICE SLEEVE AND SPLICE SLEEVE RETAINER JOINTS AS SHOWN

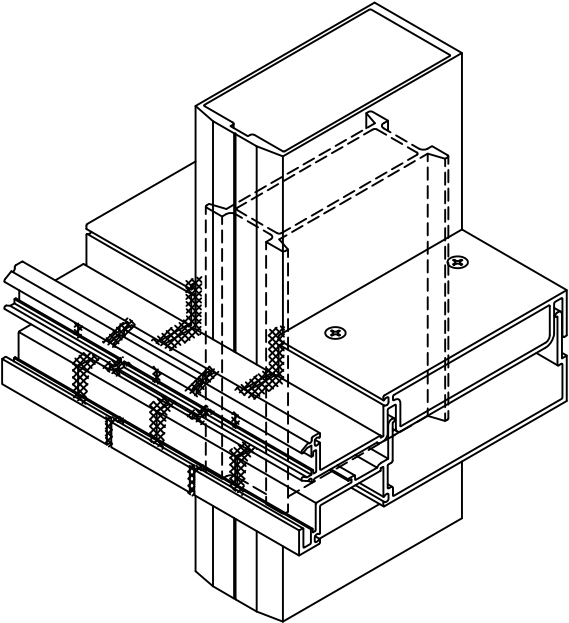

ALL SURFACES AND GROOVES MUST BE CLEANED PER THE SEALANT MANUFACTURER'S RECOMMENDATIONS.

APPLY BACKER ROD AND SEALANT BETWEEN EXPANSION HORIZONTALS. SEALANT MUST RUN FULL LENGTH OF HORIZONTAL.

EXPANSION JOINT LOCATED AT A HORIZONTAL

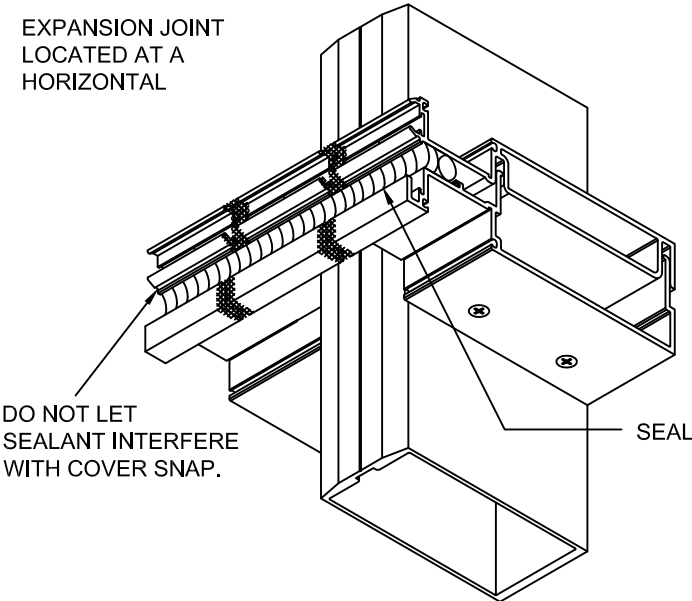


STEP - 11 ADDITIONAL SEALS

CAPTURED VERTICALS

ALL SURFACES AND GROOVES MUST BE CLEANED PER THE SEALANT MANUFACTURER'S RECOMMENDATIONS.

SEALS REQUIRED AT HEAD, SILL, INTERMEDIATE AND EXPANSION HORIZONTALS.

JUST BEFORE INSTALLING VERTICAL AND HORIZONTAL GLAZING TAPE, FACE SEAL JOINTS AT ALL 4 CORNERS. ALSO SEAL SCREW HEAD AT TOP HALF OF HORIZONTAL.

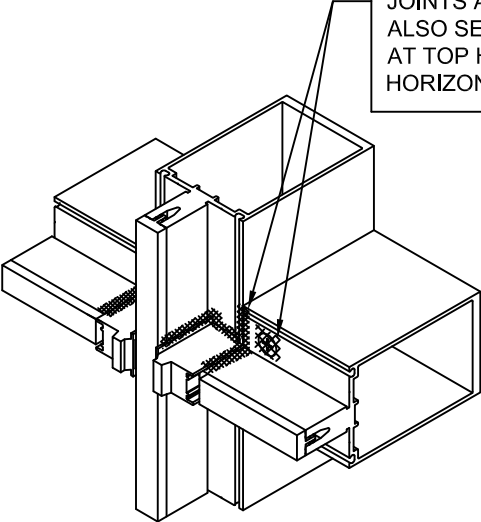


STRUCTURAL GLAZED VERTICALS

ALL SURFACES AND GROOVES MUST BE CLEANED PER THE SEALANT MANUFACTURER'S RECOMMENDATIONS.

SEALS REQUIRED AT HEAD, SILL, INTERMEDIATE AND EXPANSION HORIZONTALS.

JUST BEFORE INSTALLING VERTICAL AND HORIZONTAL GLAZING TAPE, FACE SEAL JOINTS AT ALL 4 CORNERS. ALSO SEAL SCREW HEAD AT TOP HALF OF HORIZONTAL.

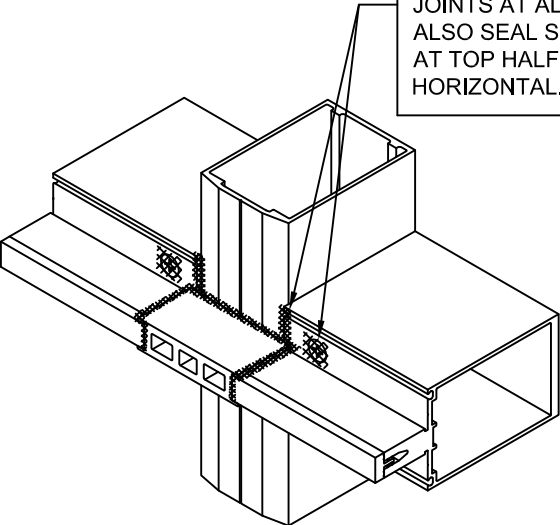

THESE DRAWINGS ARE THE SOLE AND EXCLUSIVE PROPERTY OF KAWNEER AND CONTAIN SENSITIVE, PRIVILEGED OR CONFIDENTIAL INFORMATION WHICH MAY BE USED ONLY FOR ITS BENEFIT. THE DISCLOSURE OF THESE DRAWINGS TO UNAUTHORIZED PERSONS IS STRICTLY PROHIBITED. THIS DOCUMENT AND ALL COPIES MUST BE RETURNED UPON DEMAND.
© COPYRIGHT KAWNEER COMPANY, INC., 2008


STEP - 12 INSTALL INTERIOR GLAZING TAPE

REFER TO TEST DRAWINGS AND REPORTS FOR APPROVED GLAZING TAPE AND REQUIRED SILICONE JOINT WIDTH. PLEASE CONTACT THE FACTORY FOR ASSISTANCE.


NOTE: DO NOT APPLY TAPE AT EXPANSION HORIZONTALS. REFERENCE STEP 15 ON SHEET 6 FOR GLAZING INFORMATION.

PREPARATION OF ALUMINUM SURFACES ARE TO BE EXACTLY AS OUTLINED BY THE SEALANT MANUFACTURER'S SPECIFICATIONS AND RECOMMENDATIONS.

NOTE: ACCESS IS REQUIRED FROM THE INTERIOR TO APPLY STRUCTURAL SILICONE AFTER GLASS INSTALLATION.

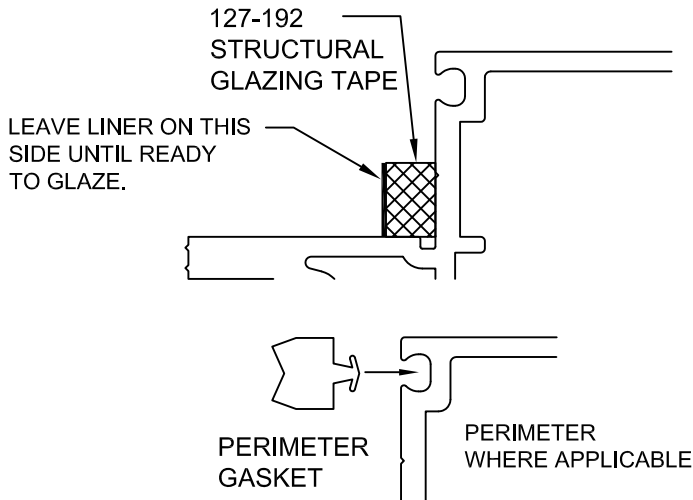

APPLY GLAZING TAPE ON FRONT OF MULLION AS SHOWN.

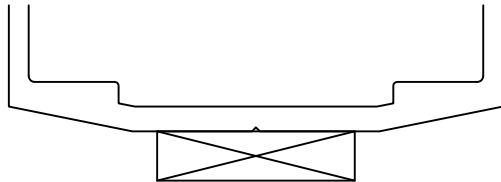

STRUCTURAL GLAZING TAPE 127-143



Product Engineering & Development


95449-89
07/09/12

1600 SYSTEM 2
IMPACT
INSTALLATION
INSTRUCTIONS


GENERAL IMPACT INSTALLATION INSTRUCTIONS; FOR JOB SPECIFIC APPLICATION, PLEASE CONTACT FACTORY TO VERIFY THAT SYSTEM MEETS APPLICABLE CODES.

STEP - 13 INSTALL SETTING BLOCKS

CAPTURED VERTICALS

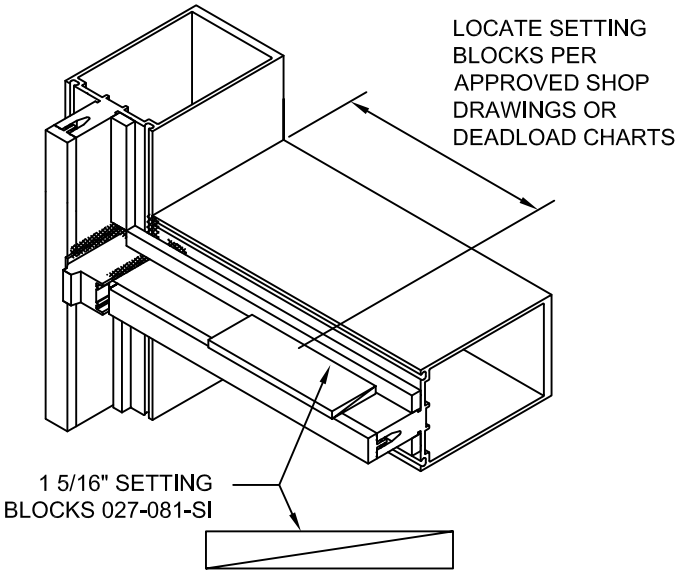

STRUCTURAL GLAZED VERTICALS

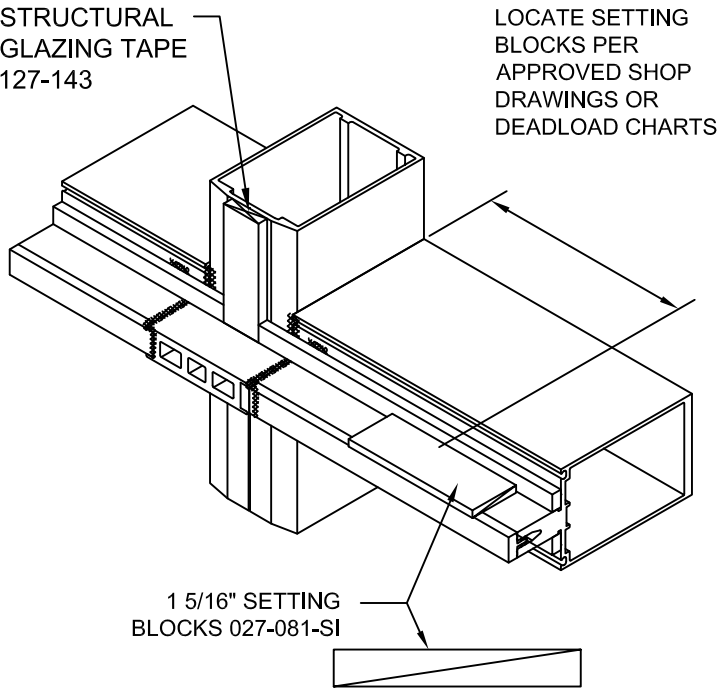

STEP - 14 INSTALL EXTERIOR GASKETS INTO PRESSURE PLATES



GASKETS SHOULD BE INSTALLED JUST PRIOR TO GLASS TO AVOID CONTAMINATION BY JOB SITE DEBRIS. GASKET GROOVES AND POCKETS SHOULD BE CLEAN.

IN TEMPERATURES COLDER THAN 50° F, ARRANGEMENTS SHOULD BE MADE TO WARM GASKETS BEFORE INSTALLATION. THIS WILL PREVENT EXCESSIVE GLAZING PRESSURE ON THE GLASS DUE TO COLD, STIFF RUBBER GASKETS.

GASKETS CAN BECOME DEFORMED DURING STORAGE IN CARTONS. THEY SHOULD BE REMOVED FROM CARTONS SEVERAL HOURS PRIOR TO GLAZING AND LAID FLAT OR HUNG TO ALLOW RECOVERY OF CORRECT SHAPE. TEMPERATURES SHOULD BE AT LEAST 50° F TO ALLOW THIS.

GASKET INSTALLED LENGTH TO BE DAYLITE OPENING. GASKETS TO BE CUT LONG FOR SOME "CROWD-IN". GASKETS SHOULD NEVER BE " STRETCHED TO FIT".


"CROWD-IN" TO BE 1/8" PER FOOT UP TO 5'-0", 3/16" PER FOOT UP TO 8'-0", 1/4" PER FOOT OVER 8'-0".

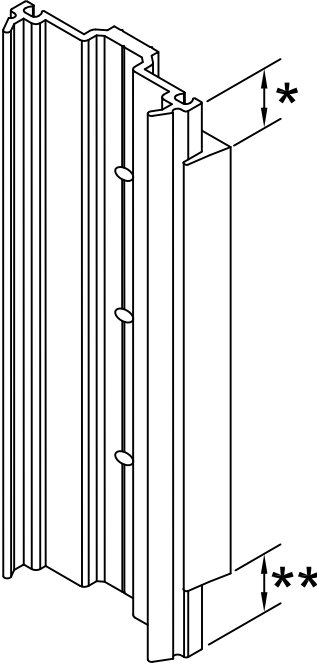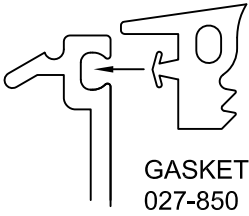

VERTICAL GASKETS ARE TO RUN CONTINUOUS EXCEPT AT THE HEAD/SILL CONDITIONS AND EXPANSION HORIZONTALS.

* AT HEAD - STOP 1 9/16" SHORT UNDER SPLICE - FLUSH WITH TOP OF PRESSURE PLATE

** AT SILL - STOP 1 9/16" SHORT AT SPLICE - STOP 2" SHORT

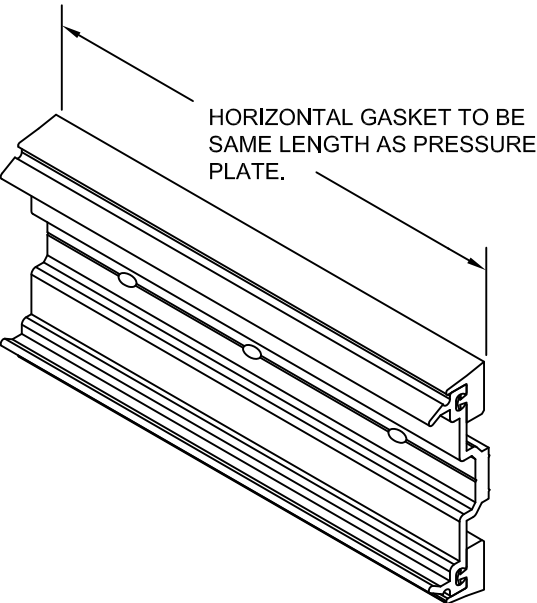

PERIMETER PRESSURE PLATE
162-528 SHOWN

PERIMETER GASKET AT ONE SIDE. DO NOT CUT 1/2" SHORT.

OFFSET PRESSURE PLATE (WHERE APPLICABLE)


STEP - 15 GLAZING GLASS

CAPTURED VERTICALS

- CLEAN GLASS AND FRAMING AT STRUCTURAL SILICONE CONTACT SURFACES PER SEALANT MANUFACTURER'S RECOMMENDATIONS.
- PRIME FRAMING AS REQUIRED.
- REMOVE TAPE LINER.
- POSITION GLASS ON SETTING BLOCKS MAINTAINING PROPER GLASS BITE PER APPROVED SHOP DRAWINGS. PRESS GLASS INTO TAPE. INSURE A 1/4" SPACE BETWEEN THE GLASS AND FACE OF MULLION WHEN SETTING GLASS AND APPLYING TORQUE TO PRESSURE PLATE SCREWS.
- ATTACH 3" LONG TEMPORARY PRESSURE PLATES WITH 128-406 (1/4-14 X 1" HEX WASHER HEAD TYPE AB) SCREWS. MAXIMUM TEMPORARY SPACING IS 30". IF WINDS GREATER THAN 50 MPH (80 KPH) ARE EXPECTED, ADDITIONAL TEMPORARIES MAY BE REQUIRED. CONSULT YOUR SEALANT AND/OR INFILL SUPPLIER FOR SPACING RECOMMENDATION.
- INSTALL PRESSURES PLATES WHERE POSSIBLE. IF NECESSARY, APPLY MASKING TAPE AT GLASS AND FRAMING TO AVOID ADDITIONAL CLEAN-UP AFTER APPLICATION OF STRUCTURAL SILICONE.

AT HORIZONTALS AND VERTICALS

APPLY STRUCTURAL SILICONE SEALANT (PER APPROVED SHOP DRAWINGS) COMPLETELY FILLING JOINTS. TOOL SEALANT.

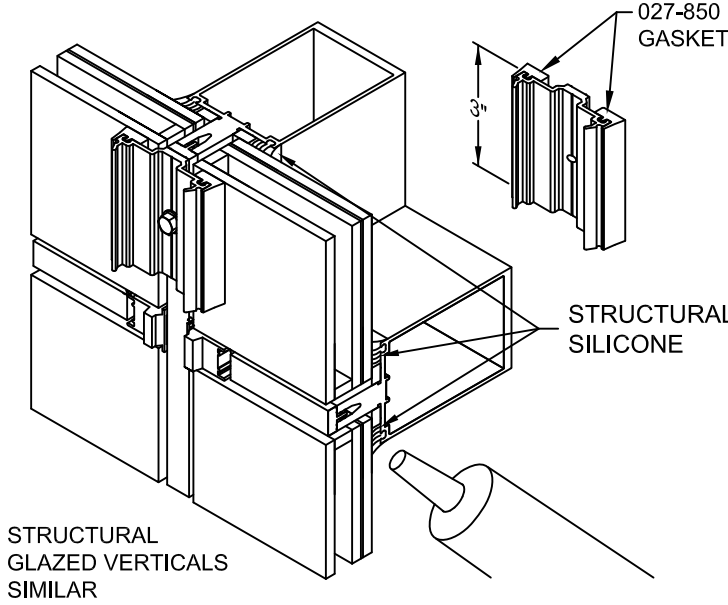


162-951 (SHT 08 OF 12)

CONFIDENTIAL AND PROPRIETARY INFORMATION
KAWNEER COMPANY INC.

THESE DRAWINGS ARE THE SOLE AND EXCLUSIVE PROPERTY OF KAWNEER AND CONTAIN SENSITIVE, PRIVILEGED OR CONFIDENTIAL INFORMATION WHICH MAY BE USED ONLY FOR ITS BENEFIT. THE DISCLOSURE OF THESE DRAWINGS TO UNAUTHORIZED PERSONS IS STRICTLY PROHIBITED. THIS DOCUMENT AND ALL COPIES MUST BE RETURNED UPON DEMAND.
© COPYRIGHT KAWNEER COMPANY, INC., 2008

STEP - 15 GLAZING GLASS

STRUCTURAL GLAZED VERTICALS

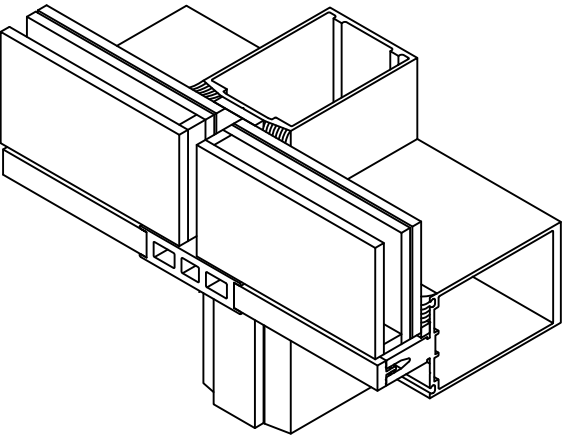


TEMPORARY RETAINERS FOR STRUCTURAL GLAZED VERTICALS.


THE LOCATION OF TEMPORARY EXTERIOR INFILL RETAINERS SHOULD BE AT A MAXIMUM SPACING OF 30" ON CENTER.

IF WINDS GREATER THAN 50 MPH (80KPH) ARE EXPECTED, ADDITIONAL TEMPORARIES MAY BE REQUIRED. CONSULT YOUR SEALANT AND/OR INFILL SUPPLIER FOR SPACING RECOMMENDATIONS.

GLAZING TEMPORARY
162-353



INSTALL WITH 128-950
(#12 X 2-1/2 PHTFS TYPE "B")
SCREWS AT 1 5/16" GLASS

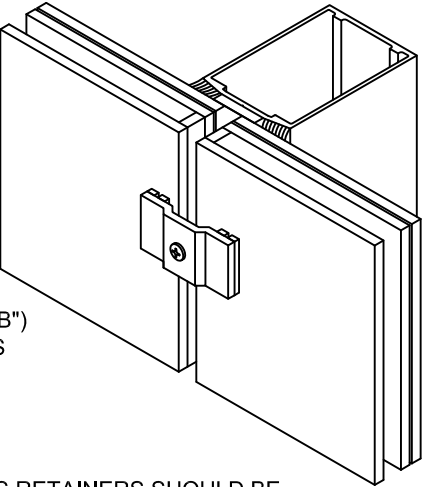

AT CORNERS AND SPLAYS RETAINERS SHOULD BE MADE FROM A GOOD QUALITY HARDWOOD. THESE RETAINERS ARE NOT SUPPLIED BY KAWNEER.

KAWNEER

Product Engineering & Development

95449-84
09/30/11

1600 SYSTEM 2
IMPACT
INSTALLATION
INSTRUCTIONS

162-951 (SHT 08 OF 12)


GENERAL IMPACT INSTALLATION INSTRUCTIONS; FOR JOB SPECIFIC APPLICATION, PLEASE CONTACT FACTORY TO VERIFY THAT SYSTEM MEETS APPLICABLE CODES.

STEP - 15 GLAZING GLASS

AT EXPANSION HORIZONTALS


CAPTURED VERTICAL SHOWN
STRUCTURAL GLAZED VERTICAL SIMILAR

INSTALL 027-851 WEDGE GASKET AT THE EXTERIOR OF THE EXPANSION HORIZONTALS AND THE 027-575 SPACER AT THE INTERIOR AS SHOWN BELOW.

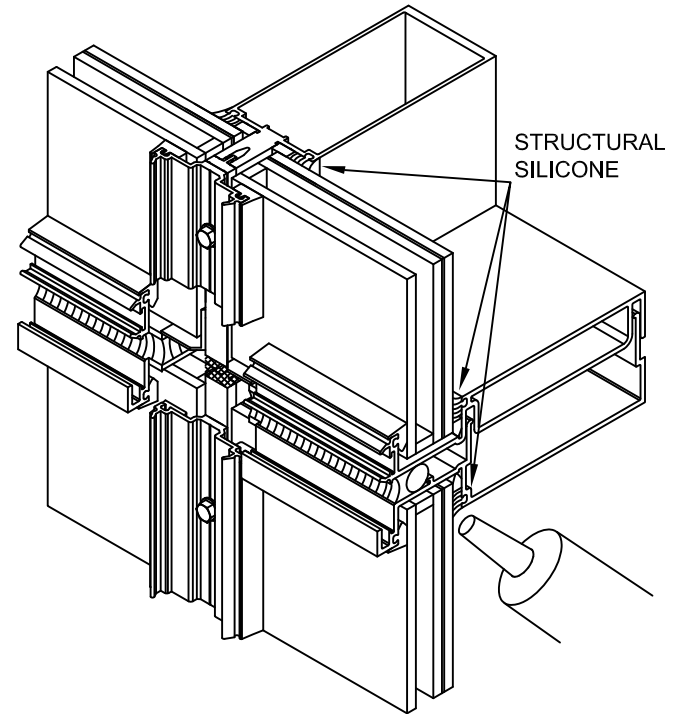

APPLY STRUCTURAL SILICONE SEALANT (PER APPROVED SHOP DRAWINGS) COMPLETELY FILLING JOINTS. TOOL SEALANT.


027-851
WEDGE GASKET

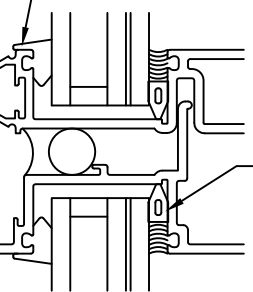

027-575
WEATHERSEAL
SPACER

STEP - 16 INSTALL EXTERIOR
PRESSURE PLATES


CAPTURED VERTICALS

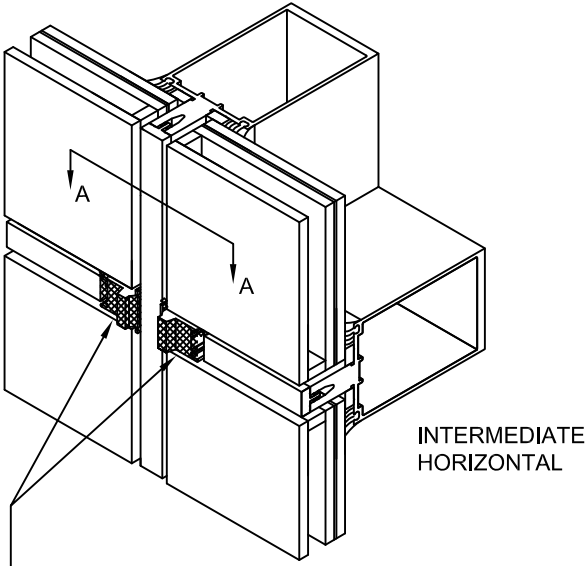

JUST BEFORE INSTALLING VERTICAL PRESSURE PLATES APPLY A GENEROUS AMOUNT OF SEALANT TO THE JOINT PLUG FACE FILLING JOINTS AS SHOWN.


JUST BEFORE INSTALLING VERTICAL PRESSURE PLATES APPLY A GENEROUS AMOUNT OF SEALANT TO THE JOINT PLUG FACE FILLING JOINTS AS SHOWN.

CLEAN JOINT PER SEALANT
MANUFACTURER'S RECOMMENDATIONS

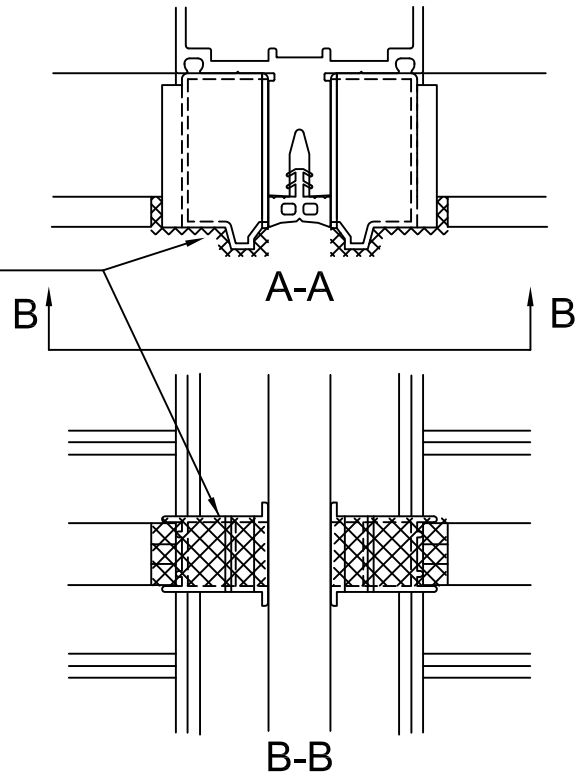

STEP - 16 INSTALL EXTERIOR
PRESSURE PLATES


CAPTURED VERTICALS

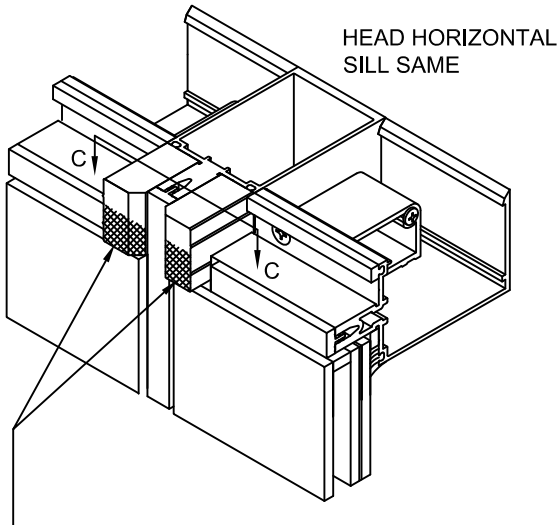

JUST BEFORE INSTALLING VERTICAL PRESSURE PLATES APPLY A GENEROUS AMOUNT OF SEALANT TO THE JOINT PLUG FACE FILLING JOINTS AS SHOWN.

JUST BEFORE INSTALLING VERTICAL PRESSURE PLATES APPLY A GENEROUS AMOUNT OF SEALANT TO THE JOINT PLUG FACE FILLING JOINTS AS SHOWN.

CLEAN JOINT PER SEALANT
MANUFACTURER'S RECOMMENDATIONS

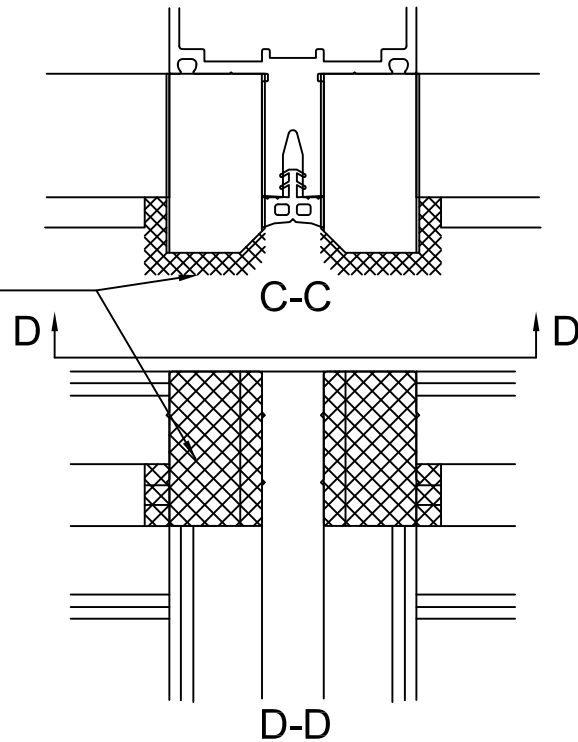

THESE DRAWINGS ARE THE SOLE AND EXCLUSIVE PROPERTY OF KAWNEER AND CONTAIN SENSITIVE, PRIVILEGED OR CONFIDENTIAL INFORMATION WHICH MAY BE USED ONLY FOR ITS BENEFIT. THE DISCLOSURE OF THESE DRAWINGS TO UNAUTHORIZED PERSONS IS STRICTLY PROHIBITED. THIS DOCUMENT AND ALL COPIES MUST BE RETURNED UPON DEMAND.
© COPYRIGHT KAWNEER COMPANY, INC., 2008

STEP - 16 INSTALL EXTERIOR
PRESSURE PLATES




RECOMMEND USING TORQUE LIMIT
TOOL 162-399 SEE NOTE.

NOTE - THE TORQUE LIMIT TOOL WAS DESIGNED TO BE USED WITH A HAND DRIVEN DEVICE.THE TOOL CAN BE ADAPTED TO A DRILL MOTOR IF USED AT A MAXIMUM SPEED OF APPROX. 300 RPM. HIGHER SPEEDS CAN CAUSE OVERHEATING AND AFFECT THE ACCURACY. AFTER APPROX. 1 HOUR OF TOOL USAGE CHECK TORQUE SETTINGS WITH A TORQUE WRENCH.

HOW TO SET TORQUE LIMIT

1. ATTACH ANY CALIBRATED TORQUE INDICATOR TO OUTPUT STUB (1) AND DETERMINE PRESENT TORQUE SETTING WHILE HOLDING THE BODY (5), OR VICE-VERSA.
2. REMOVE SNAP RING (2) AND LOCKING PLATE (3).
3. ADJUST NUT (4) WITH OPEN-END WRENCH : CLOCKWISE TO INCREASE TORQUE, COUNTER- CLOCKWISE TO DECREASE TORQUE.

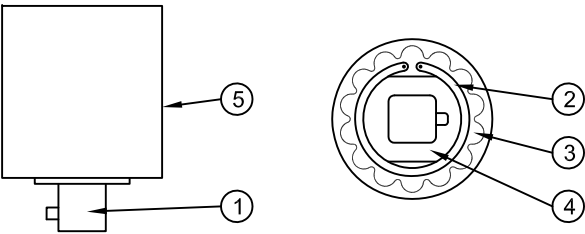

4. OBTAIN NEW TORQUE READING WITH THE CALIBRATED TORQUE INDICATOR. REPEAT PRECEDING STEP IF MORE ADJUSTMENT IS NECESSARY TO REACH DESIRED LIMIT.
5. REPLACE LOCKING PLATE INTO NOTCHES AND INSTALL SNAP RING. IF LOCKING PLATE DOES NOT "SEAT", MOVE THE ADJUSTING NUT SLIGHTLY UNTIL IT DROPS IN PLACE. THE DIRECTION IS BEST DETERMINED BY WHETHER A MINIMUM TORQUE APPLICATION OR A MAXIMUM ONE IS DESIRED.



1600 SYSTEM 2
IMPACT
INSTALLATION
INSTRUCTIONS

Product Engineering & Development

95449-84
09/30/11

GENERAL IMPACT INSTALLATION INSTRUCTIONS; FOR JOB SPECIFIC APPLICATION, PLEASE CONTACT FACTORY TO VERIFY THAT SYSTEM MEETS APPLICABLE CODES.

STEP - 16 INSTALL EXTERIOR PRESSURE PLATES

CAPTURED VERTICALS


INSTALL PRESSURE PLATES USING 128-406 (1/4-14 X 1" HEX WASHER HEAD TYPE AB) SCREWS

SCREWS ARE TO BE LOCATED 9" ON CENTER FOR DESIGN LOADS UP TO 65 PSF. FOR DESIGN LOADS 66 PSF AND HIGHER, SCREWS ARE TO BE LOCATED 3" ON CENTER.

ALWAYS LOCATE A SCREW AS CLOSE AS POSSIBLE TO A HORIZONTAL JOINT. THIS WILL PROVIDE MAXIMUM PRESSURE FOR THE CRITICAL JOINT SEALS.

AT EACH HORIZONTAL AND VERTICAL PRESSURE PLATE INSTALL TWO SCREWS PART WAY, THEN INSTALL THE THIRD SCREW ALL THE WAY, AND THEN TIGHTEN THE FIRST TWO SCREWS. THIS ELIMINATES LATERAL WALKING OF THE PRESSURE PLATE POSITION.

TORQUE ALL SCREWS TO 95 TO 100 INCH POUNDS. DURING COLD WEATHER TORQUE SCREWS TO 50 INCH POUNDS UNTIL ALL 4 SIDES HAVE BEEN CLAMPED. THEN TORQUE SCREWS TO 95 TO 100 INCH POUNDS.

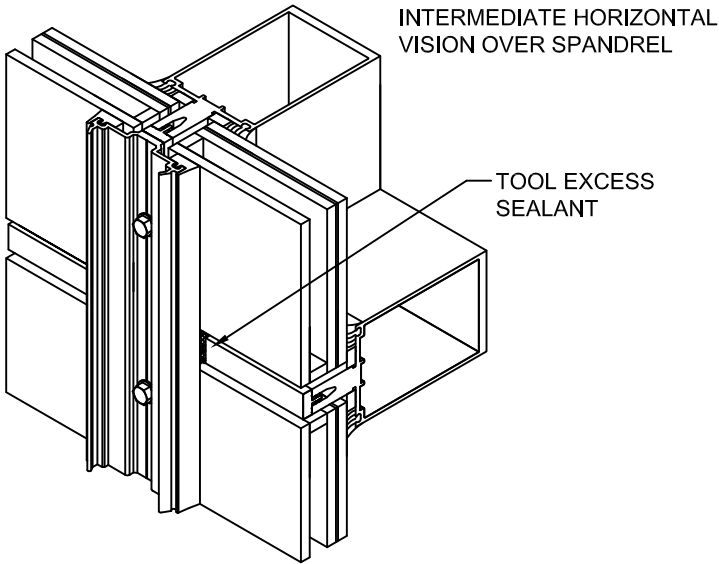


STEP - 16 INSTALL EXTERIOR PRESSURE PLATES

CAPTURED VERTICALS


VERTICAL GASKETS STOP SHORT AT THE JOINT PLUGS AT THE HEAD AND SILL.

HEAD CONDITION SILL SAME

TOOL EXCESS SEALANT

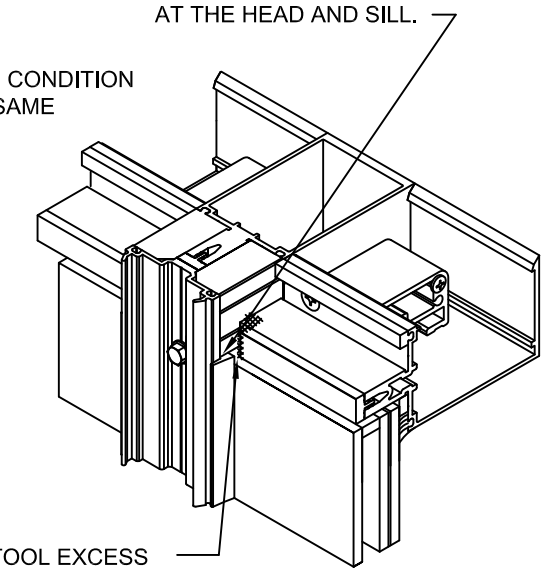

VERTICAL EXPANSION JOINTS

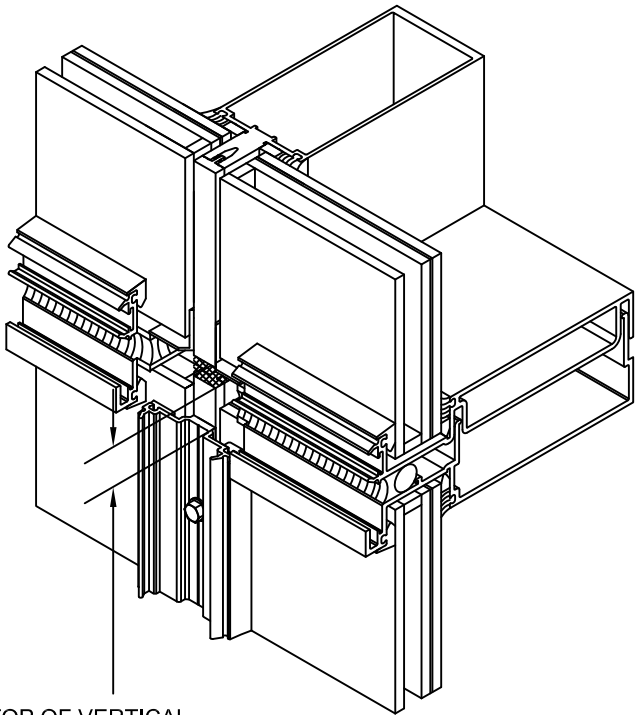


TOP OF VERTICAL MULLION TO TOP OF PRESSURE PLATE IS 1-1/2"

STEP - 16 INSTALL EXTERIOR PRESSURE PLATES

CAPTURED VERTICALS

AT TOP PRESSURE PLATE LOCATE SCREW CLOSE TO THE MULLION JOINT BUT NOT BELOW THE JOINT.



CLEAN JOINT PER SEALANT MANUFACTURER'S RECOMMENDATIONS

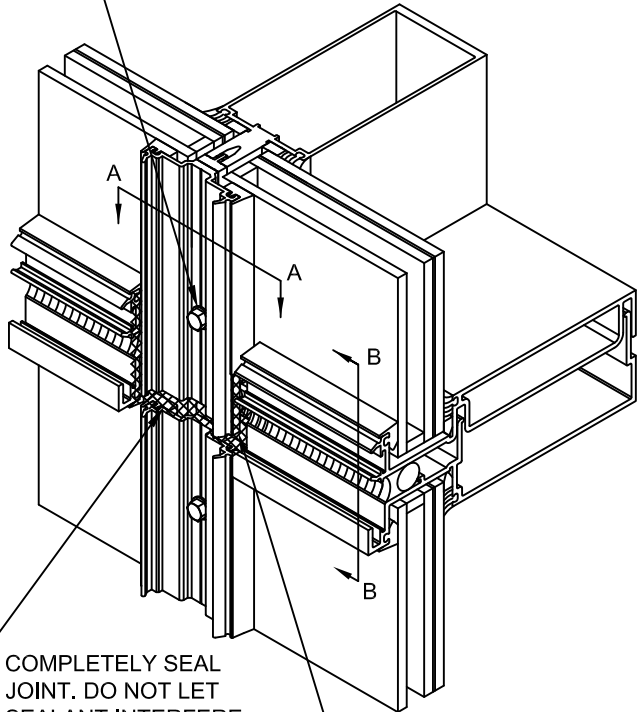

COMPLETELY SEAL JOINT. DO NOT LET SEALANT INTERFERE WITH COVER SNAP. OVERLAP PRESSURE PLATE FACE CREATING A BAND-AID SEAL.

SEAL JOINTS AS SHOWN AND TOOL SEALANT

CLEAN JOINT PER SEALANT MANUFACTURER'S RECOMMENDATIONS

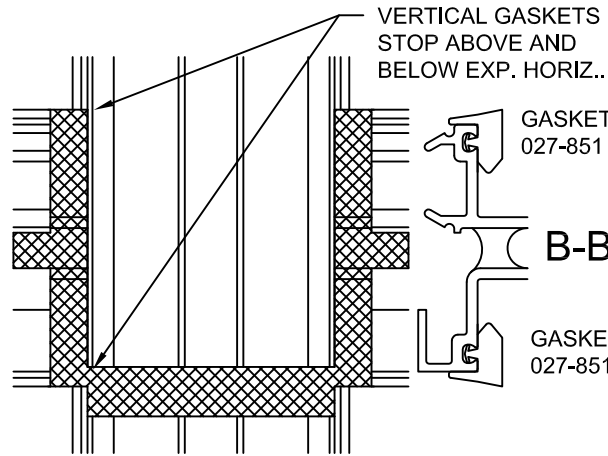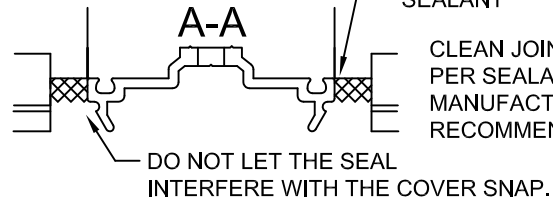

FACE VIEW

162-951 (SHT 10 OF 12)

CONFIDENTIAL AND PROPRIETARY INFORMATION KAWNEER COMPANY INC.


THESE DRAWINGS ARE THE SOLE AND EXCLUSIVE PROPERTY OF KAWNEER AND CONTAIN SENSITIVE, PRIVILEGED OR CONFIDENTIAL INFORMATION WHICH MAY BE USED ONLY FOR ITS BENEFIT. THE DISCLOSURE OF THESE DRAWINGS TO UNAUTHORIZED PERSONS IS STRICTLY PROHIBITED. THIS DOCUMENT AND ALL COPIES MUST BE RETURNED UPON DEMAND. © COPYRIGHT KAWNEER COMPANY, INC., 2008

STEP - 16 INSTALL EXTERIOR PRESSURE PLATES


CAPTURED VERTICALS

CENTER HORIZONTAL PRESSURE PLATES SO END GAPS ARE EQUAL.

INTERMEDIATE HORIZONTAL VISION OVER SPANDREL

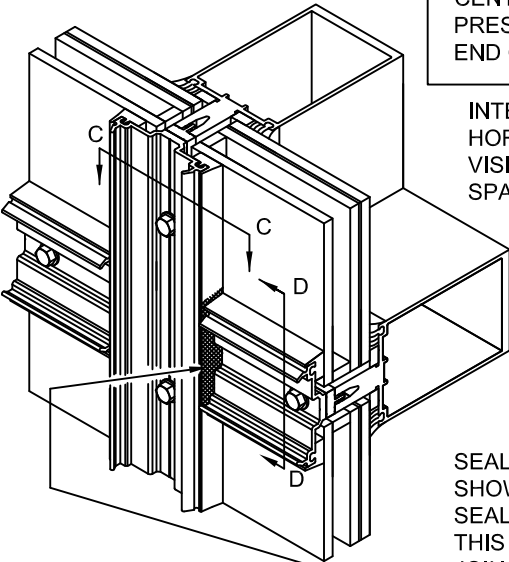


SEAL JOINTS AS SHOWN. TOOL SEALANT THIS SEAL IS TO JOIN AND ADHERE TO THE JOINT PLUG SEALS.

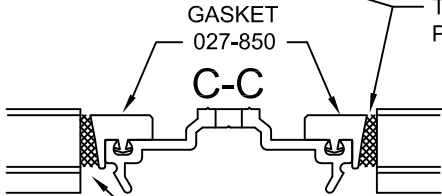

CLEAN JOINT PER SEALANT MANUFACTURER'S RECOMMENDATIONS

DO NOT LET THE SEAL INTERFERE WITH THE COVER SNAP.

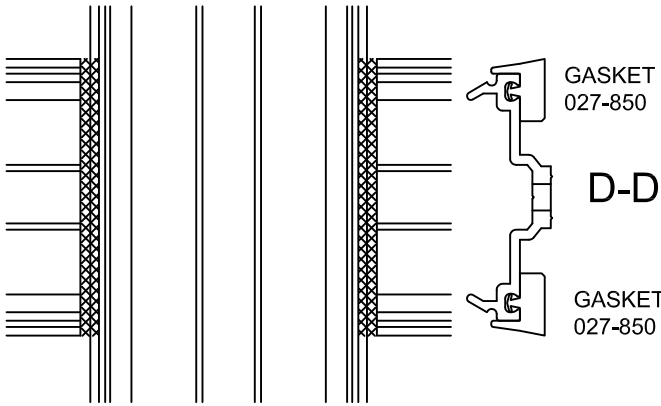

FACE VIEW

KAWNEER

Product Engineering & Development

95449-84 09/30/11


1600 SYSTEM 2 IMPACT INSTALLATION INSTRUCTIONS

162-951 (SHT 10 OF 12)

GENERAL IMPACT INSTALLATION INSTRUCTIONS; FOR JOB SPECIFIC APPLICATION, PLEASE CONTACT FACTORY TO VERIFY THAT SYSTEM MEETS APPLICABLE CODES.


STEP - 16 INSTALL EXTERIOR PRESSURE PLATES

CAPTURED VERTICALS

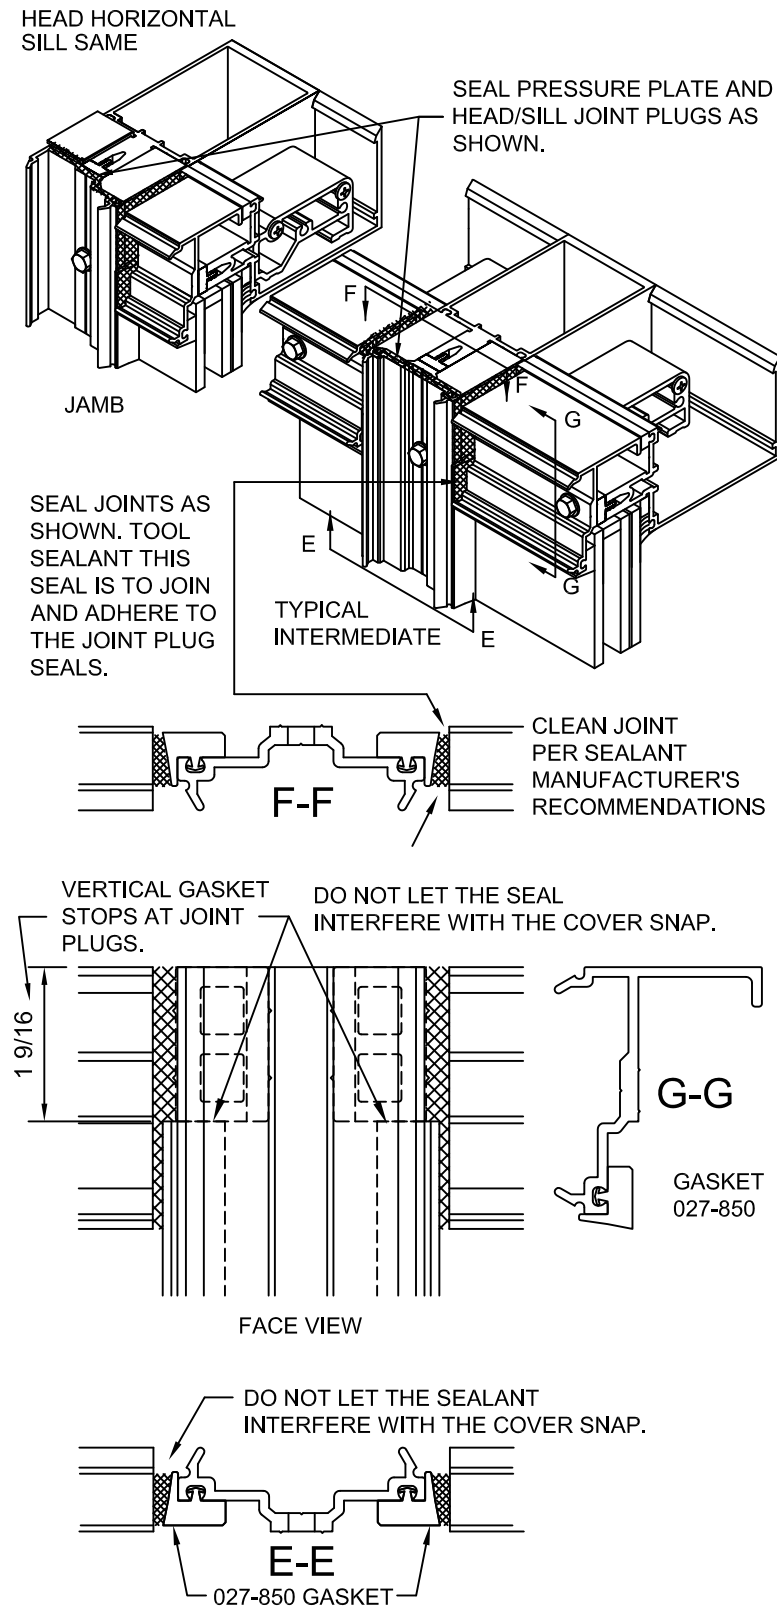


STEP - 16 INSTALL EXTERIOR PRESSURE PLATES

STRUCTURAL GLAZED VERTICALS

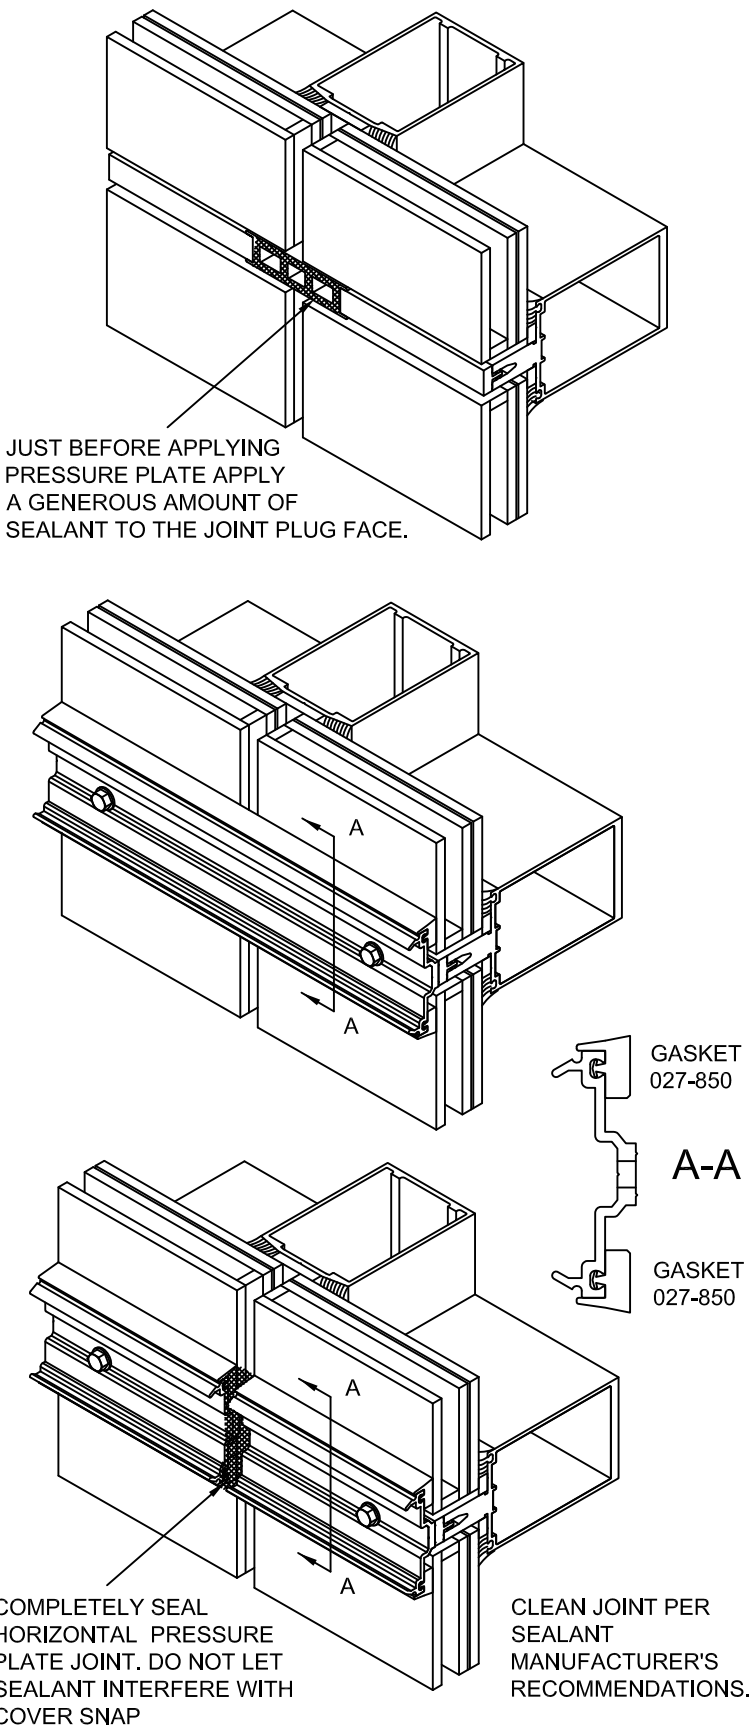

STEP - 16 INSTALL EXTERIOR PRESSURE PLATES

STRUCTURAL GLAZED VERTICALS

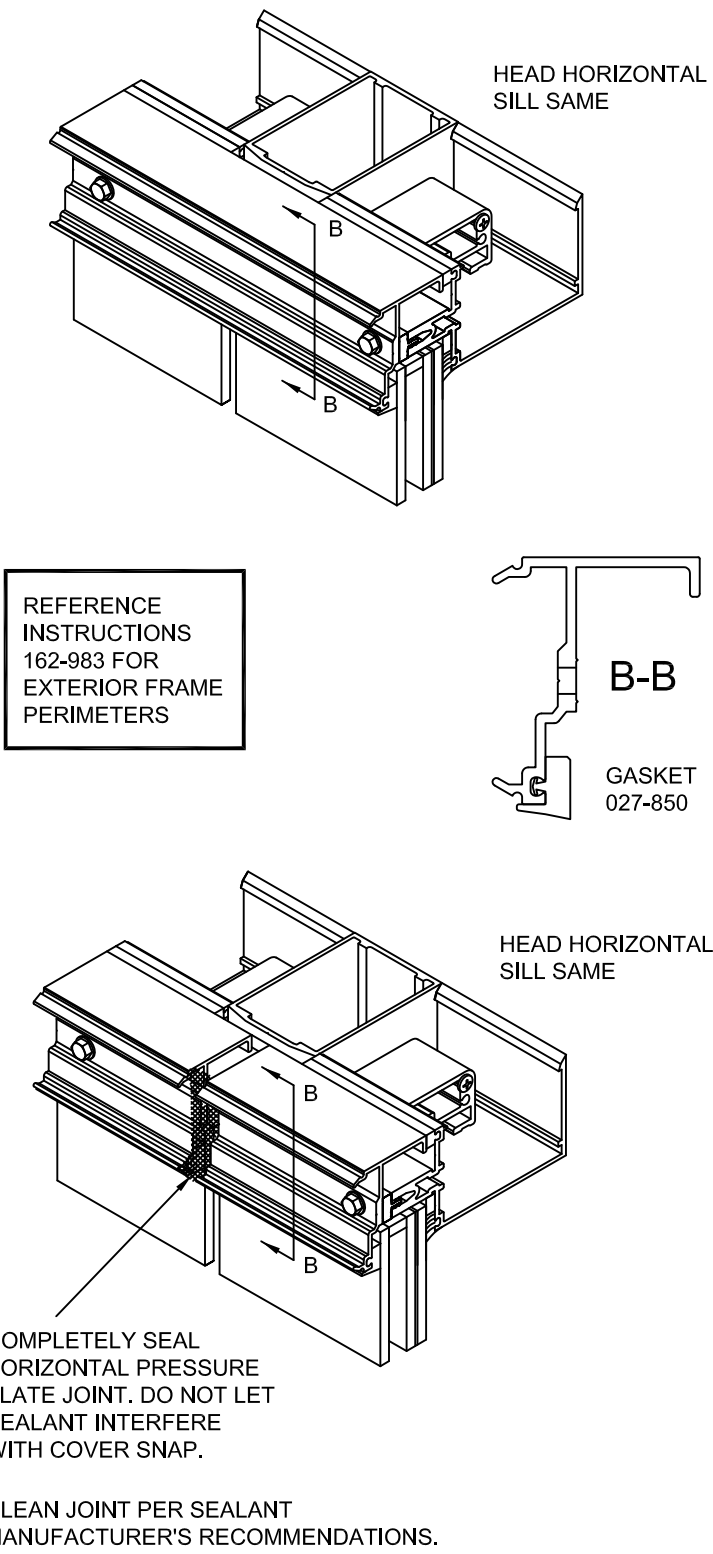


CONFIDENTIAL AND PROPRIETARY INFORMATION
KAWNEER COMPANY INC.

THESE DRAWINGS ARE THE SOLE AND EXCLUSIVE PROPERTY OF KAWNEER AND CONTAIN SENSITIVE, PRIVILEGED OR CONFIDENTIAL INFORMATION WHICH MAY BE USED ONLY FOR ITS BENEFIT. THE DISCLOSURE OF THESE DRAWINGS TO UNAUTHORIZED PERSONS IS STRICTLY PROHIBITED. THIS DOCUMENT AND ALL COPIES MUST BE RETURNED UPON DEMAND.
© COPYRIGHT KAWNEER COMPANY, INC., 2008

STEP - 17 INSTALL PERIMETER SEALS

PERIMETER WEATHER SEALS ARE INSTALLED AT THE PRESSURE PLATE LOCATION AS DETAILED BELOW. (THIS SEAL SHOULD BE INSTALLED BEFORE COVERS ARE APPLIED) EXTERIOR COSMETIC SEALS AT THE COVER MAY BE APPLIED AT THE HEAD AND JAMBS ONLY. SILL COVERS MUST REMAIN OPEN TO ALLOW WATER DRAINAGE TO THE EXTERIOR.

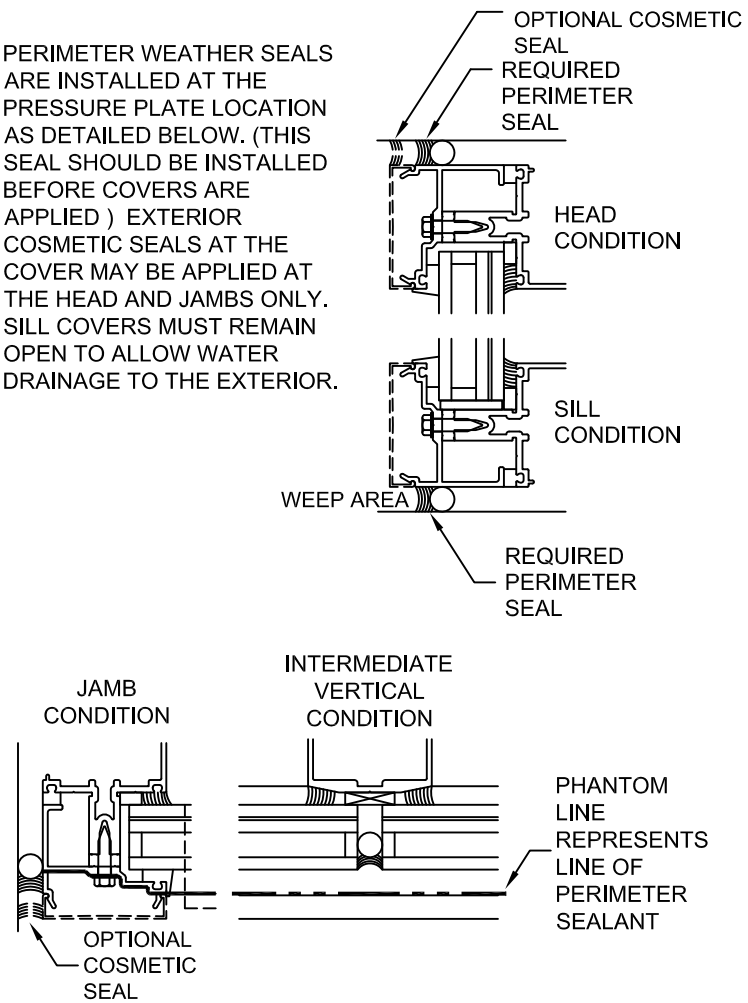

Product Engineering & Development



95449-84
09/30/11

1600 SYSTEM 2
IMPACT
INSTALLATION
INSTRUCTIONS

GENERAL IMPACT INSTALLATION INSTRUCTIONS; FOR JOB SPECIFIC APPLICATION, PLEASE CONTACT FACTORY TO VERIFY THAT SYSTEM MEETS APPLICABLE CODES.


STEP - 18 INSTALL EXTERIOR COVERS

CARE MUST BE TAKEN TO AVOID DAMAGE TO COVERS DURING INSTALLATION. USE A 18" LONG PIECE OF 2 X 4 WOOD ALONG WITH A HAMMER OR MALLET TO SEAT THE COVER.

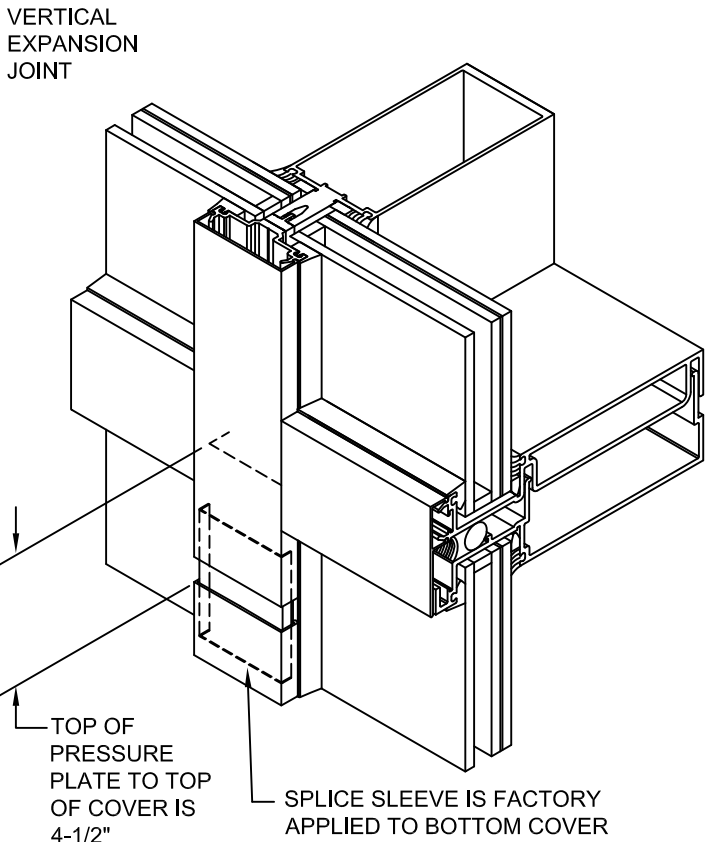
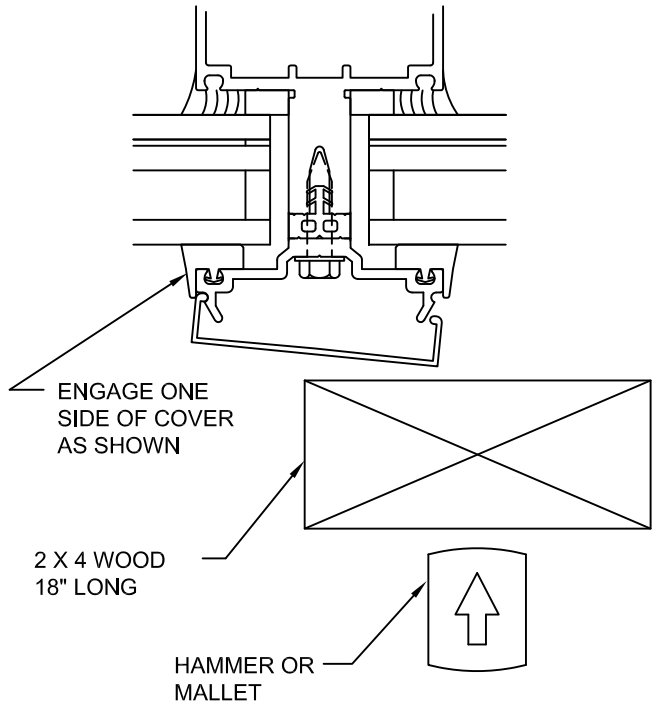


STEP - 18 INSTALL EXTERIOR COVERS

PINNING OF ALL VERTICAL COVERS IS REQUIRED FOR BOTH SIDES. DRILL A .106 DIA. HOLE (#36 DRILL) AND INSTALL 128-920 SCREWS #6 X 3/8" PAN HEAD TYPE B LOCATE PINNING AT A HORIZONTAL CLOSEST TO THE COVER HEIGHT CENTER.

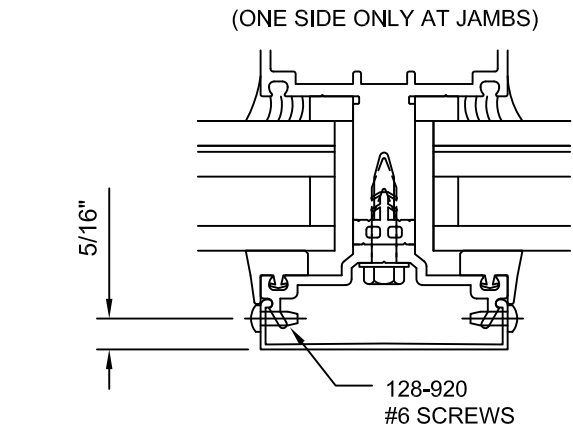


INSTALL HORIZONTAL COVERS WITH THE WEEP HOLES DOWN

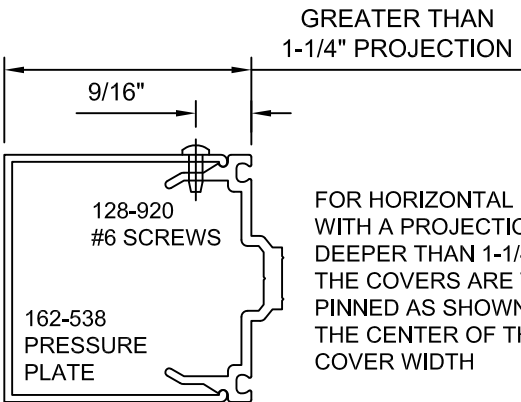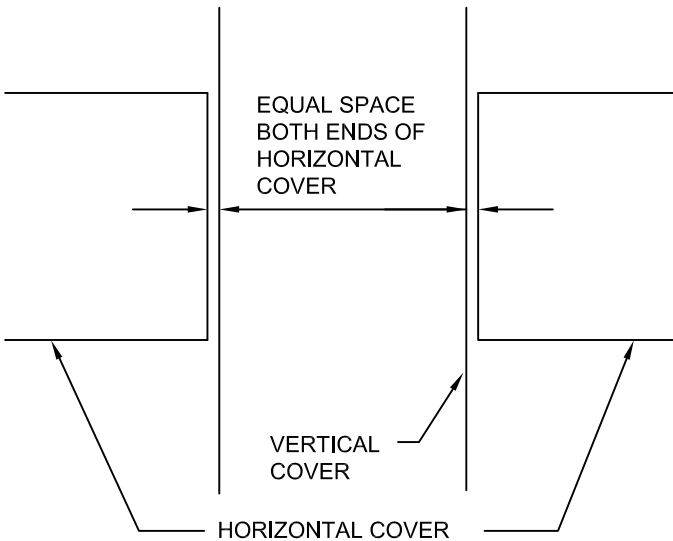

STEP - 18 INSTALL EXTERIOR COVERS

REMOVING COVERS

COVERS CAN BE SAVED IF TOLERANCES ARE NOT TOO TIGHT AND THE COVER IS REMOVED WITH EXTREME CARE

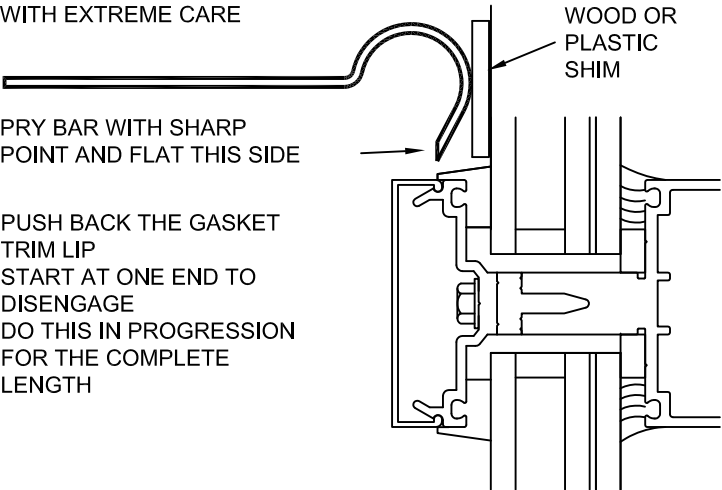

PUSH BACK THE GASKET TRIM LIP START AT ONE END TO DISENGAGE DO THIS IN PROGRESSION FOR THE COMPLETE LENGTH

STEP - 19 INSTALL WEATHER SEALS


STRUCTURAL GLAZED VERTICALS

KAWNEER DOES NOT SUPPLY SEALANT. SEALANT TO BE SILICONE PER APPROVED SHOP DRAWINGS. INFILL AND METAL TO BE CLEANED PER THE SEALANT MANUFACTURER'S RECOMMENDATIONS. SEALANT BACKUP ROD TO BE PER THE SEALANT MANUFACTURER'S RECOMMENDATIONS.

ONCE STRUCTURAL SEAL HAS CURED PER SEALANT MANUFACTURER'S RECOMMENDATIONS, REMOVE VERTICAL GLAZING TEMPORARIES AND SEAL ALL FASTENER HOLES.

FILL SPACE BETWEEN INSULATED UNITS WITH RECOMMENDED BACKUP ROD. APPLY WEATHER SEAL AS SHOWN.

ALLOW STRUCTURAL SEAL TO CURE PER SEALANT MANUFACTURER'S RECOMMENDATIONS.

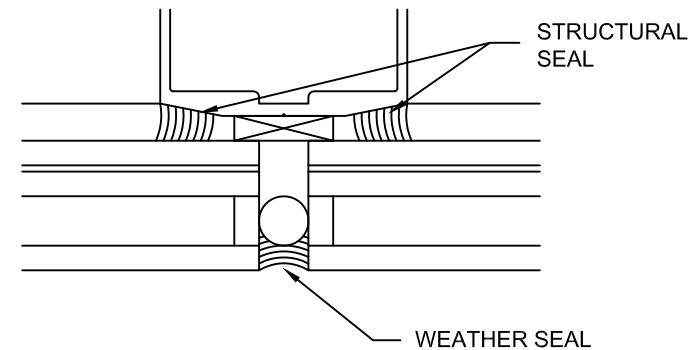


THESE DRAWINGS ARE THE SOLE AND EXCLUSIVE PROPERTY OF KAWNEER AND CONTAIN SENSITIVE, PRIVILEGED OR CONFIDENTIAL INFORMATION WHICH MAY BE USED ONLY FOR ITS BENEFIT. THE DISCLOSURE OF THESE DRAWINGS TO UNAUTHORIZED PERSONS IS STRICTLY PROHIBITED. THIS DOCUMENT AND ALL COPIES MUST BE RETURNED UPON DEMAND.
© COPYRIGHT KAWNEER COMPANY, INC., 2008

STEP - 20 INSTALL MIAMI DADE LABELS

REFERENCE SHEET 1 FOR ADDITIONAL INFORMATION

SMALL MISSILE IMPACT

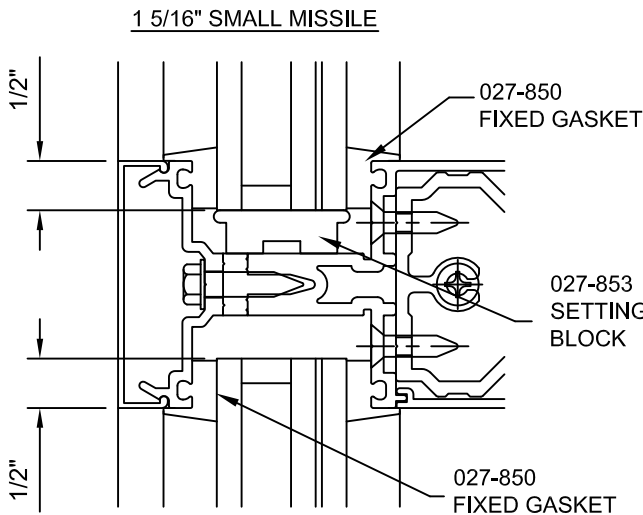

INFILL SIZE FORMULA FOR SMALL MISSILE IS DLO + 1"

FOR INSTALLATION OF SMALL MISSILE IMPACT SYSTEM, USE IMPACT STOCK LENGTH INSTRUCTIONS IN CONJUNCTION WITH INSTALLATION INSTRUCTIONS 162-961 & 162-971. PRESSURE PLATE FASTENERS ARE LOCATED 3" ON CENTER - REFER TO STEP 17 OF THESE INSTRUCTIONS FOR PRESSURE PLATE INSTALLATION.

AS WITH LARGE MISSILE IMPACT, REFER TO TEST DRAWINGS AND REPORTS FOR APPROVED SEALANT AND ANCHORING. THIS MAY VARY PER TEST. PLEASE CONTACT THE FACTORY FOR ASSISTANCE.



Product Engineering & Development

95449-84
09/30/11

1600 SYSTEM 2
IMPACT
INSTALLATION
INSTRUCTIONS