
## **DOOR APPLICATION**

Use these instructions in conjunction with installation instructions 172970 or 172971 and approved shop drawings.

- 1. Install all framing members, bottom door anchors and glass per standard instructions and approved shop drawings. Mullion halves immediately beside door will run to the floor. Match drill .154 dia. holes [#23 drill] in bottom door anchors and apply 128-910 fasteners. Glazing temps at bottom of glass lite above the door are to remain in place.
- 2. Install vertical tape and vertical perimeter trim only around door opening. Apply toggle assemblies at verticals.
- Seal along tape at verticals between perimeter trim and mullion at door opening, fillet seal around bottom of mullion half and marry to the perimeter seal at the face of the mullion tube at sill.
- Install door adapters and door header per approved shop drawings.

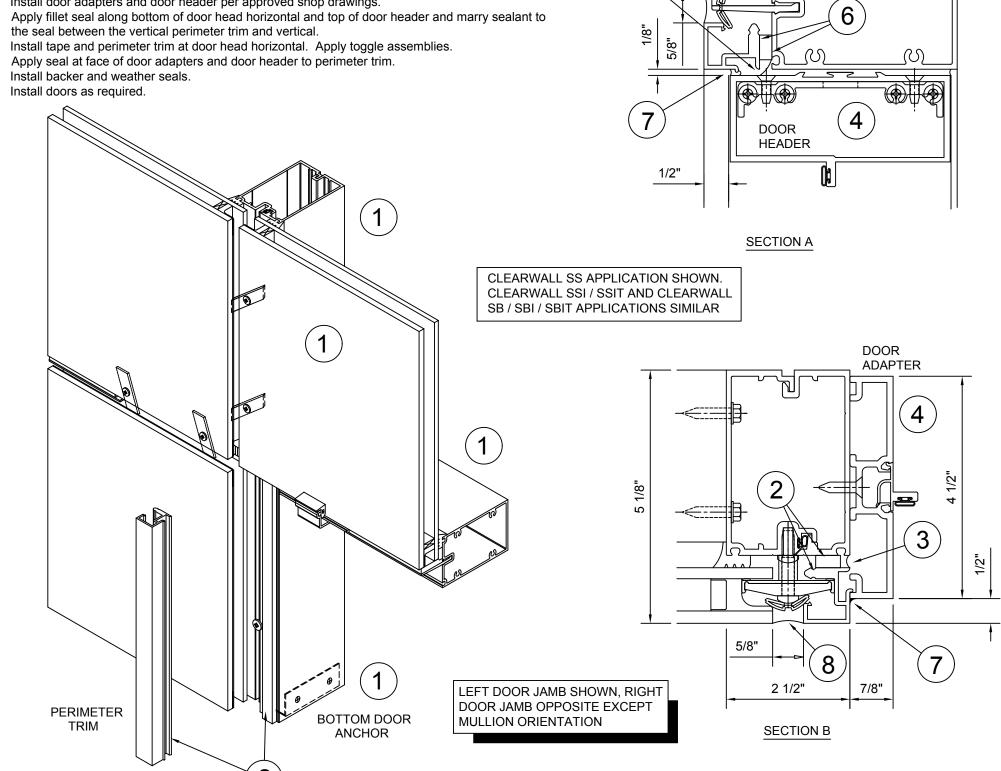


5

## 172975 (SHT 01 OF 01)

## CONFIDENTIAL AND PROPRIETARY INFORMATION KAWNEER COMPANY INC.

THESE DRAWINGS ARE THE SOLE AND EXCLUSIVE PROPERTY OF KAWNEER AND CONTAIN SENSITIVE, PRIVILEGED OR CONFIDENTIAL INFORMATION WHICH MAY BE USED ONLY FOR ITS BENEFIT. THE DISCLOSURE OF THESE DRAWINGS TO UNAUTHORIZED PERSONS IS STRICTLY PROHIBITED. THIS DOCUMENT AND ALL COPIES MUST BE RETURNED UPON DEMAND. © COPYRIGHT KAWNEER COMPANY, INC., 2010

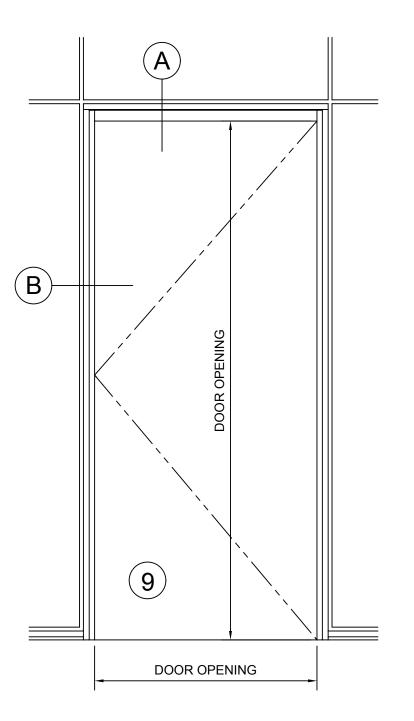



**CLEARWALL** DOOR ADAPTER **INSTALLATION** Product Engineering & Development | INSTRUCTIONS

95514-04 03/11/11

 $\Omega$ 

172975 (SHT 01 OF 01)