

USE THESE INSTRUCTIONS IN CONJUNCTION WITH INSTALLATION INSTRUCTIONS 162970 FOR SYSTEM ¹

COMPLETE STEPS 1 THROUGH 9 BEFORE STARTING THE FOLLOWING INSTRUCTIONS.

SQUARENESS AND DAYLITE OPENING DIMENSIONS MUST BE HELD TO WITHIN 1/16" OF NOMINAL FOR THE VENTS TO FIT AND OPERATE PROPERLY. DIAGONAL DIMENSIONS ACROSS OPENING MUST NOT VARY MORE THAN 1/16".

INSTALL VENT POCKET ADAPTERS

POCKET ADAPTER CUT LENGTH

VERTICAL ADAPTERS DLO PLUS 1 3/8"


HORIZONTAL ADAPTER DLO MINUS 5/16" WITH CAPTURED VERTICALS AT BOTH ENDS

IMPORTANT

ALL SURFACES AND GROOVES MUST BE CLEANED PER THE SEALANT MANUFACTURER'S RECOMMENDATIONS.


JUST BEFORE INSTALLING VENT POCKET ADAPTERS FACE SEAL JOINTS AT ALL 4 CORNERS. ALSO SEAL SCREW HEADS.

INSTALL VERTICAL ADAPTERS FIRST

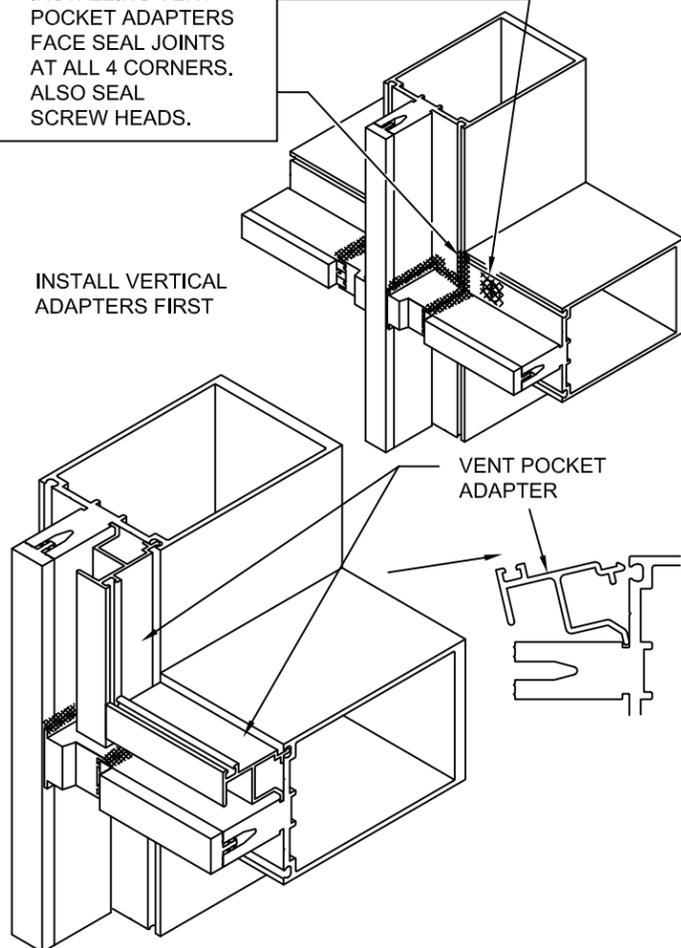


INSTALL PERIMETER VENT GASKETS

HEAD

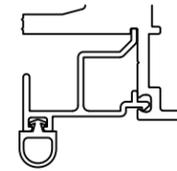


GASKET 27860

GASKET 027861

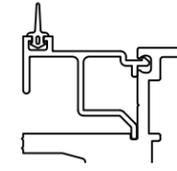


SILL

HINGE JAMB

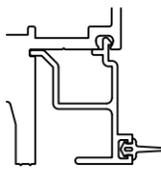


GASKET 027861

LOCK JAMB

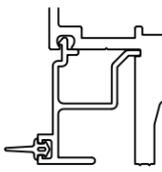


GASKET 027861

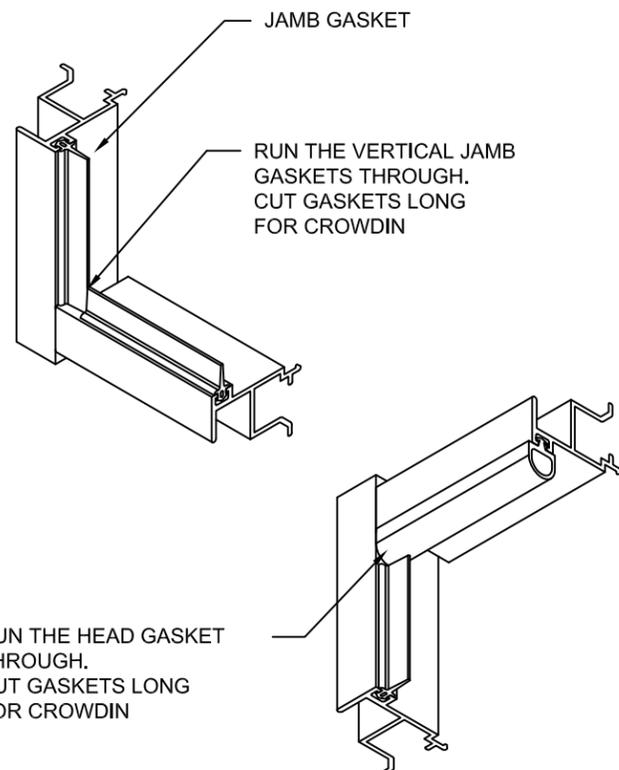

RUN THE HEAD GASKET THROUGH. CUT GASKETS LONG FOR CROWDIN

GLAZE GLASS AND INSTALL PRESSURE PLATES

AFTER INSTALLING VENT POCKET ADAPTERS COMPLETE THE REMAINING STEPS WITH INSTALLATION INSTRUCTIONS 162970 FOR GLAZING AND APPLYING EXTERIOR COVERS.

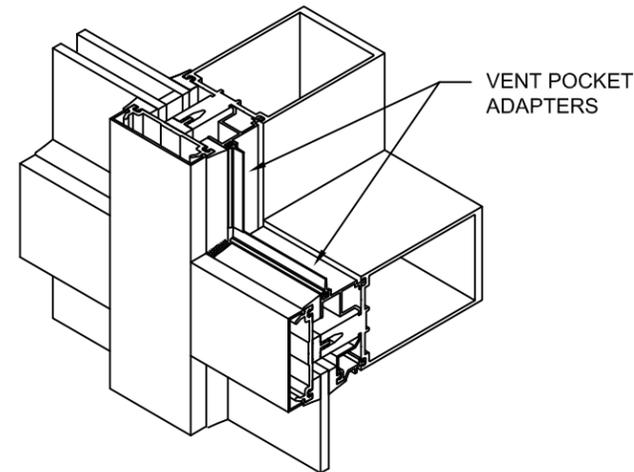


STRUCTURAL VENT GLAZING

STRUCTURAL SEAL SEALANT TO BE STRUCTURAL TYPE SILICONE AS RECOMMENDED BY THE SEALANT MANUFACTURER. SEALANT SHALL NOT BE APPLIED UNTIL ALL REQUIRED COMPATIBILITY AND ADHESION TESTING IS COMPLETE. SEALANT MUST BE APPLIED PER THE SEALANT MANUFACTURER'S RECOMMENDATIONS.

SETTING BLOCKS SHOULD BE MADE OF SILICONE MATERIAL.


EXTERIOR GLASS WEATHER SEAL SEALANT TO BE A TYPE AS RECOMMENDED BY THE MANUFACTURER OF THE STRUCTURAL SEALANT BEING USED FOR THIS PROJECT. SEALANT MUST BE APPLIED PER THE SEALANT MANUFACTURER'S RECOMMENDATIONS.

CLEAN VENT GLAZING AND APPLY 027845 2 SIDED ADHESIVE TAPE AS SHOWN. TEMPORARILY LEAVE THE PROTECTIVE LINER ON

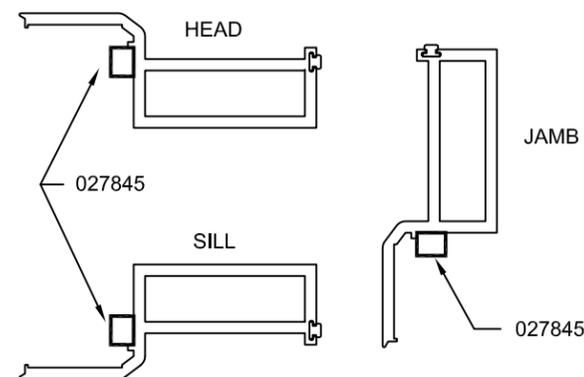


APPLY STRUCTURAL SEAL

MASK GLASS AND METAL AS REQUIRED

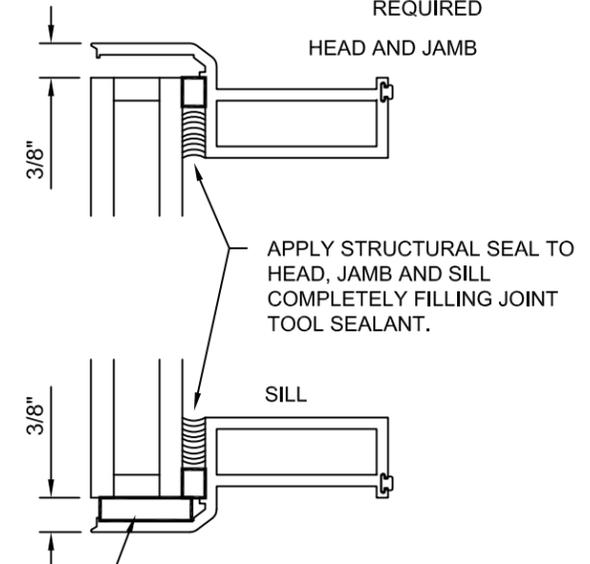

SILICONE SETTING BLOCKS 027858SI 1" GLASS

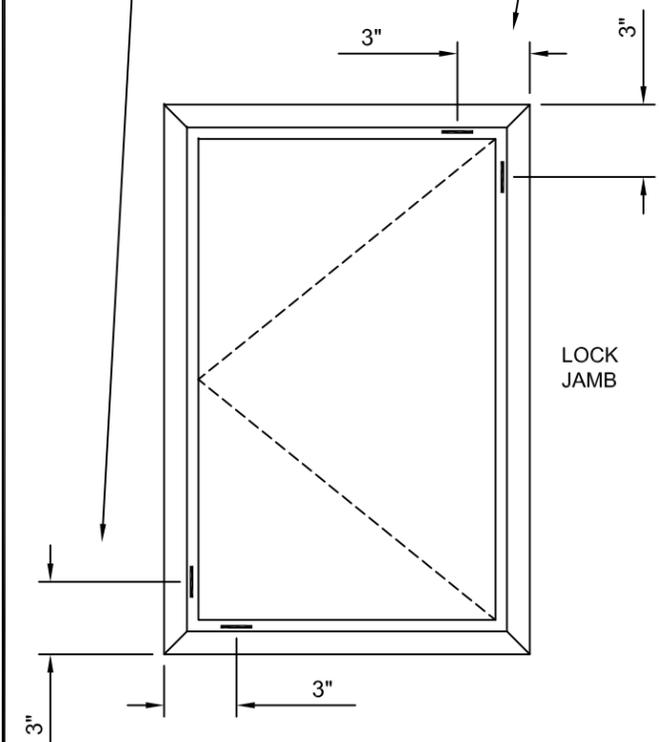

1600 GLASSVENT SYSTEM ¹
INSTALLATION INSTRUCTIONS
CASEMENTS

PART NUMBER 162979 1 OF 3


95449-096
10/01/13

DRAWING:

ORDER:

SHT:

APPLY WEATHERSEAL

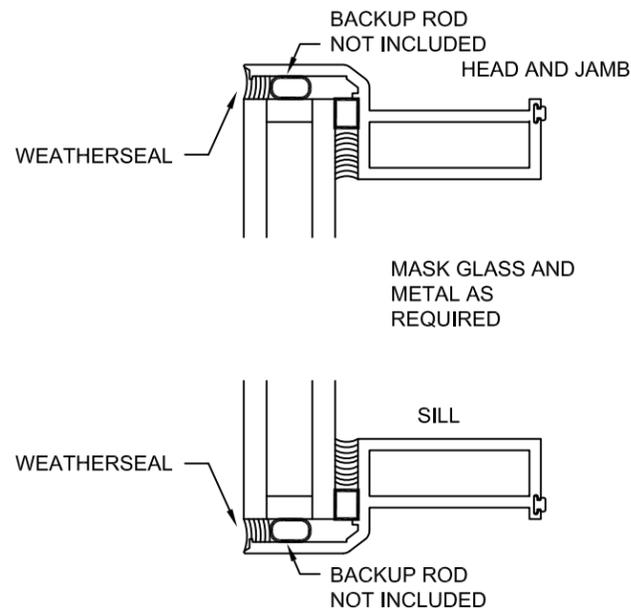


INSTALL VENT FRAME ADAPTERS

VENT FRAME ADAPTERS ARE HANDED. SEE APPROVED SHOP DRAWINGS FOR LOCATION.


HOLD ADAPTERS TIGHT AGAINST MULLION AS SHOWN. USING HOLES IN ADAPTERS MATCH DRILL MULLIONS WITH #26 DRILL 0.147 DIA. AND APPLY WITH 028651 SCREWS #10 x 3/4 PAN HEAD TYPE AB.

AT THIS TIME USE ONLY HOLES FOR ADAPTER ATTACHMENT.

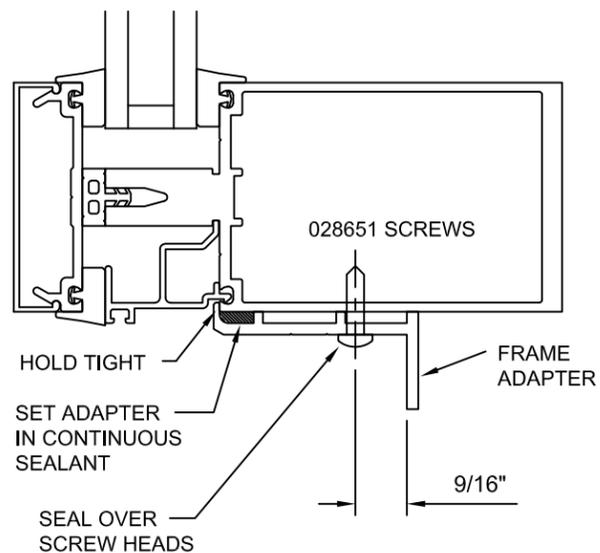


APPLY ADAPTERS TO ALL 4 SIDES AND SEAL CORNERS AS SHOWN.

DO NOT SEAL POCKET ADAPTER CORNERS.
THESE CORNERS ARE FOR WATER DRAINAGE.

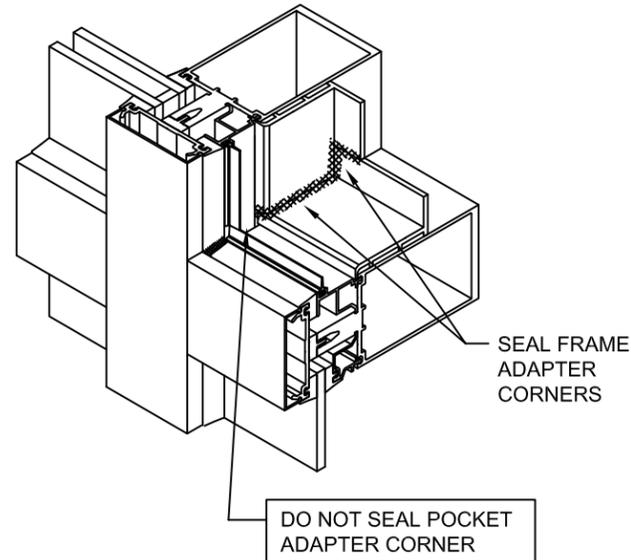

INSTALL SNUBBER RECEIVER


AT VERTICAL HINGE JAMB

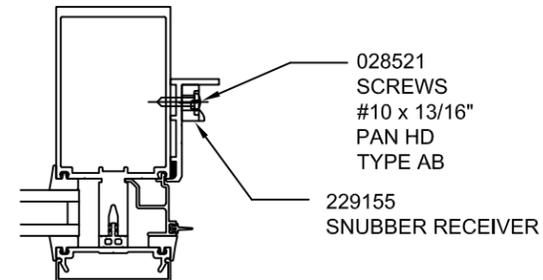

APPLY SNUBBER RECEIVER. USING HOLES IN ADAPTERS DRILL HORIZONTAL WITH #26 DRILL 0.147 DIA. AND APPLY WITH 028251 SCREWS. ADJUST SNUBBER RECEIVER ALL THE WAY TO THE INTERIOR AND SNUG TIGHTEN SCREWS. ADJUSTMENT WILL BE REQUIRED AFTER THE VENT IS INSTALLED.


INSTALL RISER BLOCK

USING HOLES IN ADAPTERS DRILL HORIZONTAL WITH #26 DRILL 0.147 DIA AND APPLY BLOCK USING 028651 SCREWS. SET SCREWS IN SEALANT.

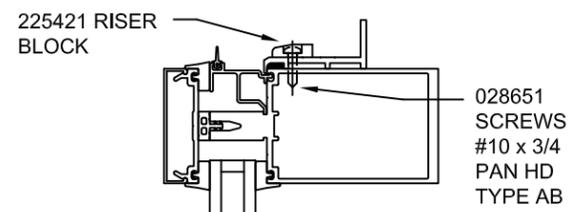


INSTALL MULTIPOINT LOCK CARRIAGE AND LOCK ROD

USING HOLES IN ADAPTERS DRILL HORIZONTAL WITH #26 DRILL 0.147 DIA AND APPLY LOCK CARRIAGE AND ROD USING 028651 SCREWS AND 280232 SPACERS. SET SCREWS IN SEALANT.

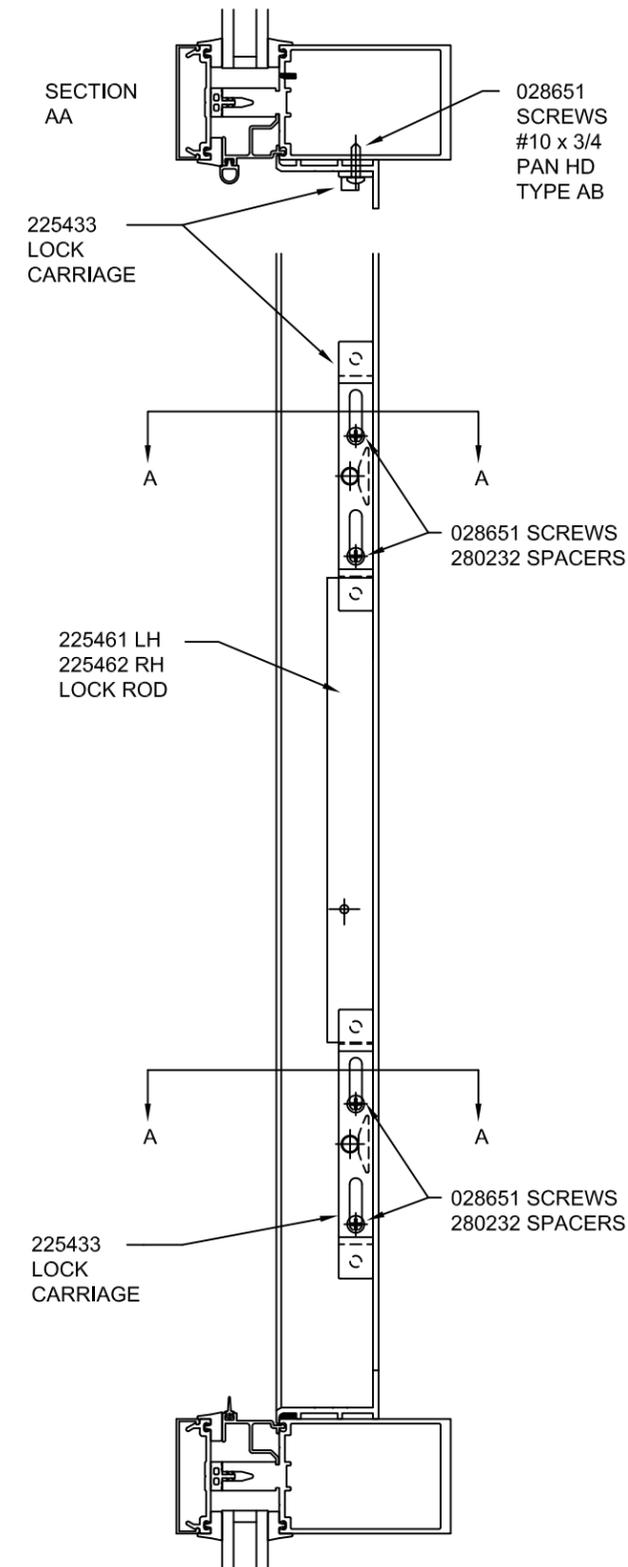


INSTALL MULTIPOINT LOCK

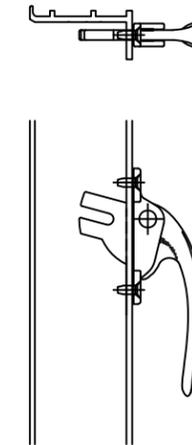

835431
MULTIPOINT LOCK
835432
GASKET
128415
SCREWS

INSTALL HOOK LOCK

AT SINGLE LOCK POINT APPLICATIONS

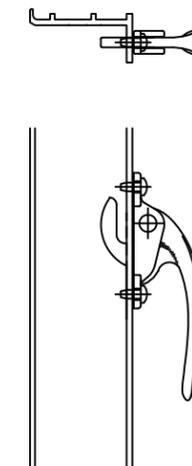

225438
HOOK LOCK
835432
GASKET
128414
SCREWS

AFTER VENTS ARE INSTALLED ADJUST VENT KEEPERS AS REQUIRED



1600 GLASSVENT SYSTEM¹
INSTALLATION INSTRUCTIONS
CASEMENTS

PART NUMBER
162979 2 OF 3

95449-103
12/11/15

DRAWING:


ORDER:

SHT:


INSTALL GLAZED VENT

BEFORE INSTALLING VENT DRILL HOLES IN THE MULLIONS USING THE REMAINING ADAPTER HOLES AS PILOTS. USE A #26 DRILL 0.147 DIA.

INSTALL THE VENT BY SCREW APPLYING THE 4-BAR HINGES TO THE JAMBS USING 028651 SCREWS #10 x 3/4 PAN HEAD TYPE AB. APPLY SEALANT TO THE SCREW HOLES BEFORE INSTALLING ARM AND SCREWS.

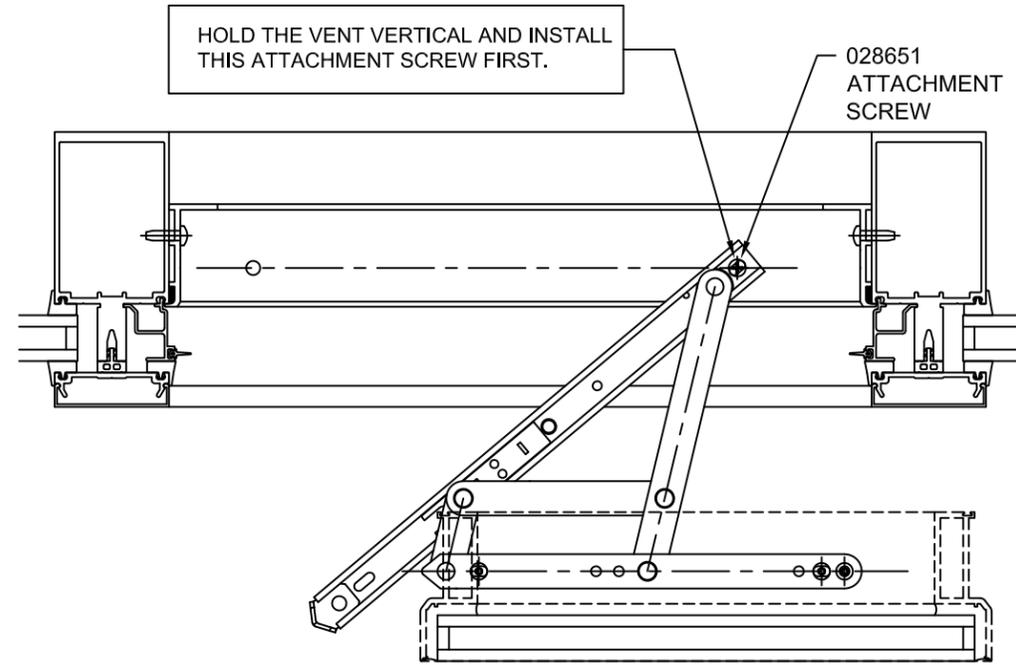

THEN ROTATE THE VENT AND INSTALL THIS ATTACHMENT SCREW.

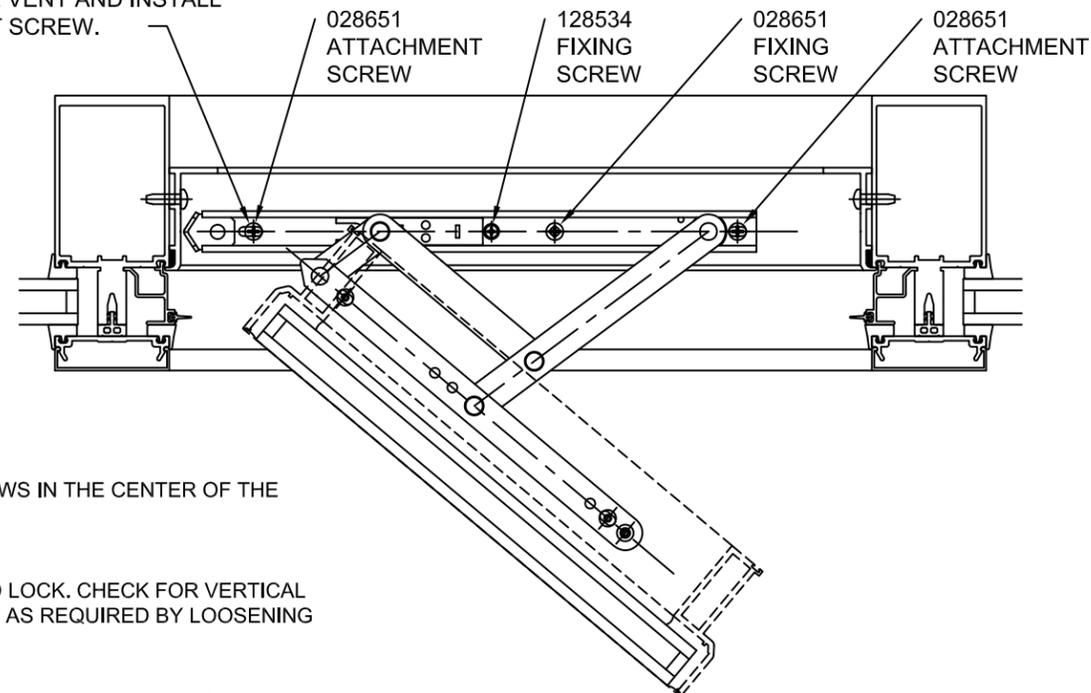

POSITION THE SCREWS IN THE CENTER OF THE 4-BAR HINGE SLOTS.

SHUT THE VENT AND LOCK. CHECK FOR VERTICAL ALIGNMENT. ADJUST AS REQUIRED BY LOOSENING 028651 SCREWS.



WITH THE VENT CENTERED DRILL AS ABOVE AND INSTALL 028651 & 128534 FIXING SCREWS. SET THE SCREW IN SEALANT.

INSTALL 4-BAR LIMIT STOPS ON DLO'S 20.500" AND OVER

THE LIMIT STOP IS FURNISHED 3 3/4" LONG. ADJUST AS REQUIRED TO LIMIT THE OPENING TO APPROXIMATELY 20°, 30° OR 45°.


DRILL 0.147 DIA. HOLES (#26 DRILL) AND INSTALL WITH 028651 SCREWS. #10 X 3/4 PAN HEAD TYPE AB

THE 4-BAR HINGE HAS A PRE-PUNCHED HOLE FOR THE 028651 SCREWS.

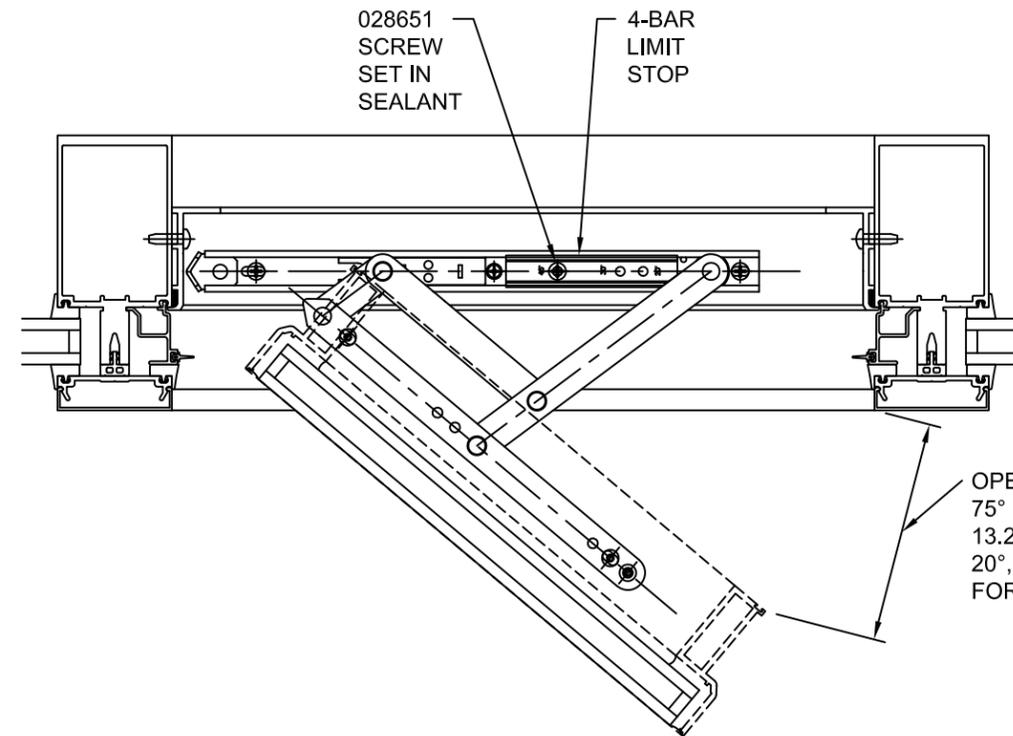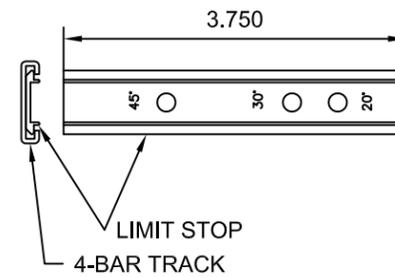

OPENING TO BE APPROXIMATELY 75° MAXIMUM FOR DLO'S OF 13.250 TO 20.499 AND 20°, 30° OR 45° MAXIMUM FOR DLO'S OF 20.500 TO 36.000.

ADJUST SNUBBER RECEIVER

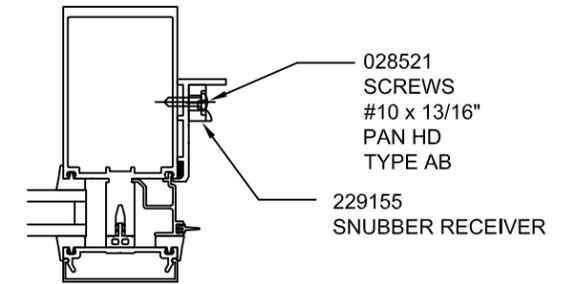

WITH THE VENT OPEN, LOOSEN SCREWS SO SNUBBER RECEIVER WILL SLIDE. THEN SLIDE SNUBBER RECEIVER TOWARDS THE INTERIOR. CLOSE VENT AND LOCK. OPEN THE VENT CAREFULLY AND TIGHTEN SNUBBER RECEIVER SCREWS.

<p>1600 GLASSVENT SYSTEM¹ INSTALLATION INSTRUCTIONS CASEMENTS</p>	<p>PART NUMBER 162979 3 OF 3</p>
	<p>95449-103 12/11/15</p>
	<p>DRAWING:</p>
	<p>ORDER:</p>
	<p>SHT:</p>